

SAFETY STANDARD 0606

Country	Code	Norm
Australia	002-000	Australia-A
	002-008	Australia -B
	002-009	Australia -C
Austria	013-000	Tor Erzeuger
Belgium	008-000	General
	008-001	HV (136KTL-HV)
Brazil	028-000	220V grid
	028-001	LV
	028-002	230V grid
	028-003	254V grid
	028-004	288V grid
China	010-000	China-B
	010-001	Taiwan
	010-002	TrinaHome
	010-003	HongKong
	010-004	SKYWORTH
	010-005	CSISolar
	010-006	CHINT
	010-007	China-MV
	010-008	China-HV
	010-009	China-A
010-010	JOLYWOOD	
Columbia	111-000	
	111-001	LV
Croatia	107-000	
Cyprus	024-000	
Czech Republic	030-000	
	030-001	MV
Denmark	005-000	General
	005-001	TR322
	005-002	Western Denmark
	005-003	Eastern Denmark
Dubai	046-000	DEWG
	046-001	DEWG MV
Estonia	109-000	



Country	Code	Norm
Europe	018-000	EN50438
	018-001	EN50549
	018-002	EN50549-HV (136KTL-HV)
Europe General	022-000	150 to 283 VAC range (260...489V Phase/Phase)
	022-001	MV (125KTL-HV)
	022-002	HV (136KTL-HV)
France	011-000	France (VDE0126)
	011-002	VDE0126-HV (136KTL-HV)
Germany	000-000	VDE AR-N 4105
	000-001	BDEW / VDE AR-N 4110
	000-002	VDE 0126
	000-003	VDE AR-N 4105-HV (136KTL-HV)
	000-004	BDEW-HV / VDE AR-N 4110-HV (136KTL-HV)
Greece	006-000	Continent
	006-001	Island
India	025-000	
	025-001	MV
	025-002	HV
	025-003	CEA
Ireland	039-000	EN50549-1
Italia	001-000	CEI-021 Internal
	001-001	CEI-016 Italia
	001-002	CEI-021 External
	001-003	CEI-021 In Areti
	001-004	CEI-021 Internal-HV
	001-005	CEI-016-HV
Japan	014-000	50 Hz
	014-001	60 Hz
Korea	020-000	Korea
	020-001	Korea-DASS
Latvia	122-000	
Lithuania	108-000	
Mexico	035-000	LV
Netherland	007-000	General
	007-001	MV
	007-002	HV



Country	Code	Norm
New Zealand	027-000	
	027-001	MV
	027-002	HV
Norway	034-000	
	034-001	LV
Philippines	026-000	
	026-001	HV
Poland	012-000	LV
	012-001	MV (125KTL-HV)
	012-002	HV (136KTL-HV)
	012-003	ABCD
Romania	123-000	
Saudi Arabia	121-000	
Slovakia	029-000	VSD
	029-001	SSE
	029-002	ZSD
Spain	003-000	RD1699
	003-001	RD1699-HV (136KTL-HV)
	003-002	UNE217002+RD647
	003-004	Spain Islands
Sweden	021-000	
South Africa	044-000	
	044-001	HV (136KTL-HV)
Switzerland	015-000	Switzerland-A
	015-001	Switzerland-B
Thailand	040-000	PEA
	040-001	MEA
Turkey	004-000	
Ukraine	033-000	
United Kingdom	009-000	G99
	009-001	G98
	009-002	G99-HV (136KTL-HV)
IEC EN61727	019-000	
Wide-Range-60Hz	038-000	Off-grid
LV-Range-50Hz	042-000	Off-grid