


BATTERY FIRMWARE UPDATE (BDU+BMS+PCU)

1. Buttons.....	1
2. HV ZBT 5K BATTERY FIRMWARE UPDATE (BMS+PCU).....	2

1. Buttons

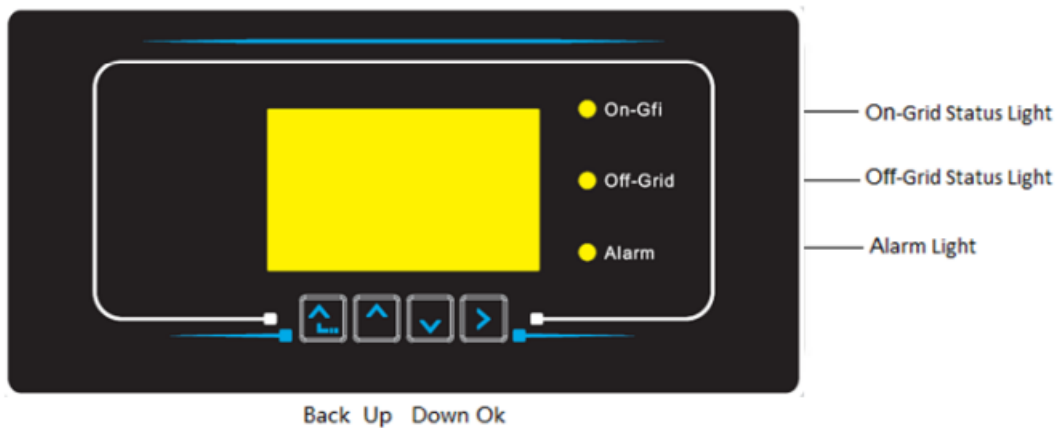

- Press “Back” to go back to the previous screen or to enter the main interface.
- Press “Up” to enter the upper menu or to increase the value by 1;
- Press “Down” to enter the lower menu or to decrease the value by 1;
- Press “OK” to select the option of the current menu or to move to the next number.

2. HV ZBT 5K BATTERY FIRMWARE UPDATE (BMS+PCU)

1. Preparing the USB flash drive with "firmware" folder

1. To update the firmware of the AZUURRO HV ZBT 5K batteries to the version present on our website: www.zcsazzurro.com;
2. Select the relevant inverter and download the latest firmware from the products section of the website
3. Unzip the downloaded file and extract the entire folder.
4. Copy the folder, without changing its name, onto a USB 2.0 (8 GB) drive that has been previously formatted in FAT32 format.

2. Updating

1. Insert the USB flash drive into the appropriate port on the side of the inverter (with the inverter switched off).
2. Power up the inverter from a photovoltaic source.
3. Select "*1. BDU Software Update*" from the menu and the update will start automatically.
4. Select "*1. BMS Software Update*" from the menu and the update will start automatically.
5. Then select "*1. PCU Software Update*" from the menu and the update will start automatically.
6. When the update is complete, switch off the inverter (disconnect it completely from the power supply) and remove the USB drive.