



SCAN ME
FOR INSTALLATION
TUTORIALS & DOCUMENTATION



QUICK GUIDE

HYD3000-HYD6000-ZP1 HYBRID INVERTER



Always wear protective clothing and/or personal protective equipment



Always consult the manual



General notice - Important Safety Instructions

IMPORTANT COMMUNICATION


Inside the box of this product are available the quick guide in English and Italian. Please note that more up-to-date revisions of the included speed guides may be available. Therefore, in order to ensure the correct installation and maintenance procedure it is necessary to verify the documentation, available in all languages, within the documentation or products section of the website www.zcsazzurro.com, the same documentation is also available by scanning the qrcode on the front of the product or directly within the app Azzurro Operators. Datasheets, technical notes, certifications and warranty terms and conditions are also available on the above platforms.

TABLE OF CONTENTS


- [1. INSTALLATION AND DISTANCES](#)
- [2. INSTALLATION](#)
- [3. DISPLAY & BUTTONS](#)
- [4. MAIN MENU](#)
- [5. CONNECTING TO THE GRID](#)
- [6. PHOTOVOLTAIC CONNECTIONS](#)
- [7. COMMUNICATION CONNECTION – COM PORT](#)
- [8. BATTERY CONNECTION](#)
- [9.1 SETTING PHOTOVOLTAIC CHANNELS](#)
- [9.2 SETTING BATTERY CHANNEL](#)
- [10.1 MEASURING EXCHANGE VIA CT SENSOR](#)
- [10.2 MEASURING EXCHANGE VIA DDSU METER](#)
- [10.2.1 DDSU METER SETTING ON EXCHANGE AND INVERTER](#)
- [10.2.2 MEASURING EXTERNAL PRODUCTION VIA DDSU METER](#)
- [10.2.3 DDSU METER SETTING ON EXTERNAL PRODUCTION](#)
- [10.2.4 CONFIGURING DDSU EXCHANGE METER AND DDSU PRODUCTION METER](#)
- [10.2.5 CHECKING CORRECT DDSU METER READING](#)
- [10.3 READING VIA DDSU METER](#)
- [10.3.1 SETTING DTSU METER](#)
- [10.3.2 CHECKING CORRECT DTSU METER READING](#)
- [11. INITIAL SET UP PROCEDURE](#)
- [12. INITIAL SET-UP](#)
- [13. CHECKING THE CORRECT OPERATION](#)
- [14. CHECKING THE INVERTER SETTINGS](#)
- [15. ZERO FEED-IN MODE](#)
- [16. LOGIC INTERFACE \(DRMS0\)](#)
- [17.1 EPS MODE \(OFF GRID\)](#)
- [17.2 EPS MODE \(OFF GRID\) - WIRING PROCEDURE AND INSTALLATION TYPES](#)
- [17.3 EPS MODE \(OFF GRID\) – OPERATION](#)
- [17.4 EPS MODE \(OFF GRID\) - MENU ENABLING](#)
- [18.1 OFF GRID MODE ONLY](#)
- [18.2 OFF GRID MODE ONLY - START UP](#)
- [19.1 PARALLEL INVERTER MODE - CONFIGURATION](#)
- [19.2 PARALLEL INVERTER MODE - SETTINGS](#)
- [20. FIRMWARE UPDATE](#)
- [21. SELF-TEST](#)
- [22. % CHARGE MODE](#)
- [23. QUICK INFO ON SYSTEM STATUS](#)
- [24. OPERATING STATUSES IN AUTOMATIC MODE](#)

1. INSTALLATION AND DISTANCES



Dimensions and distances to be observed:

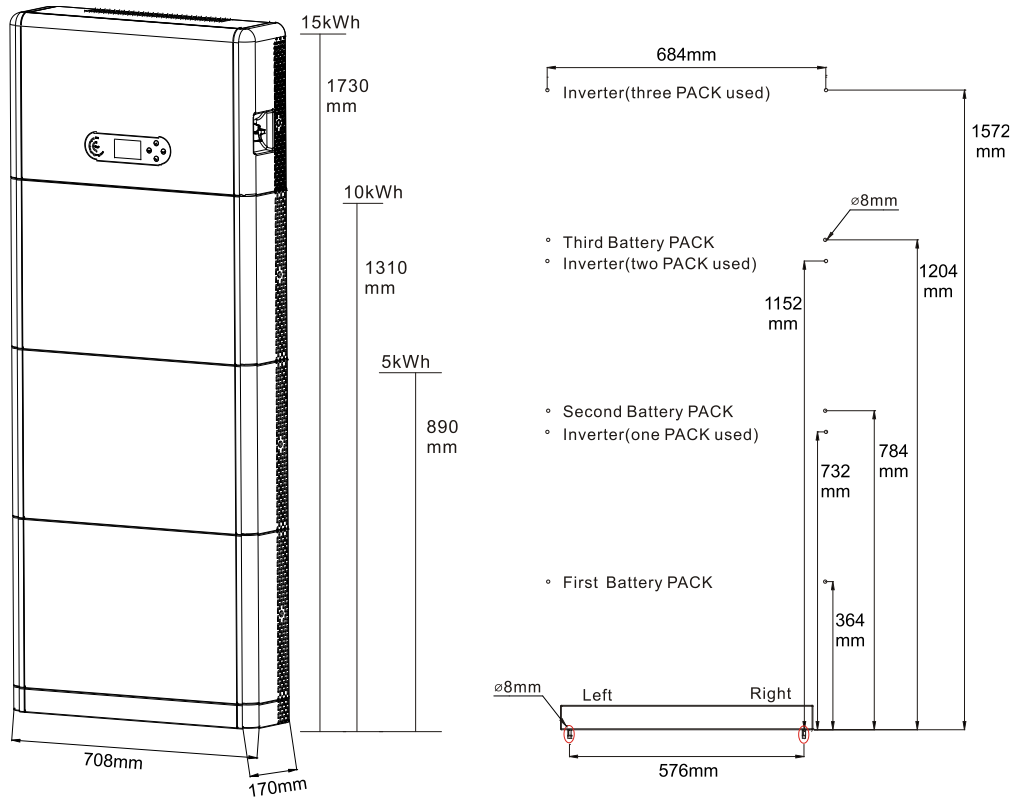

To guarantee adequate room for both installation and effective heat dissipation, make sure there is ample space around the 1PH HYD3000-HYD6000-ZP1 residential energy storage inverter.

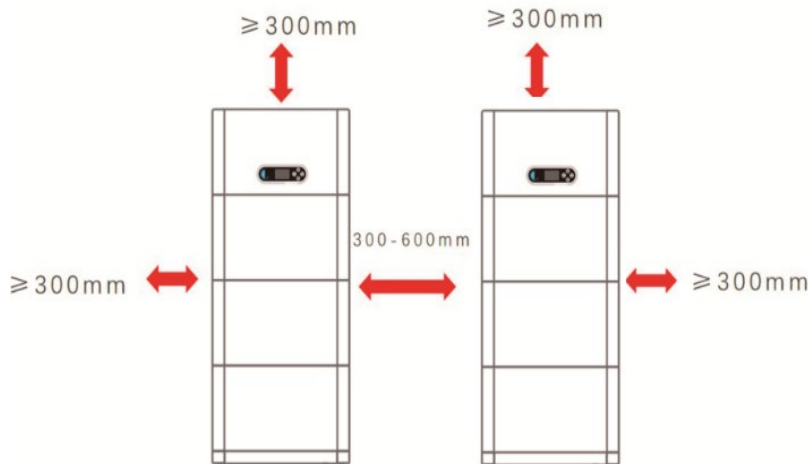

Installing the base:

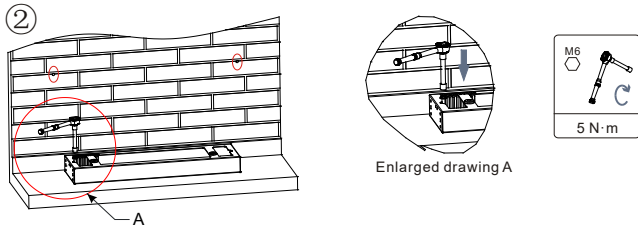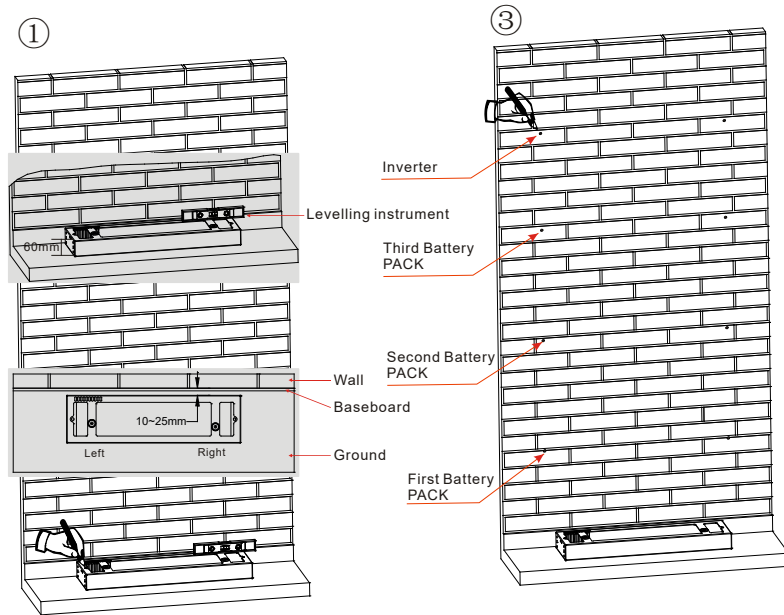




If holes cannot be drilled on the ground, the battery expansion modules must be secured on the wall

Step 1: Place the base against a wall, leaving a gap of 10-25 mm between the base and the wall. Adjust the position of the holes using a level and mark them with a felt-tip pen.

Step 2: To install the base, remove it, and drill the holes using an impact drill with an 8 mm diameter bit, drilling to a depth of 60-65 mm. Tighten the expansion screws to firmly secure the base in place.

Step 3: Use a felt-tip pen to mark the holes for attaching the battery modules and inverters, following the dimensions shown in the figure below.

Installing the modules:

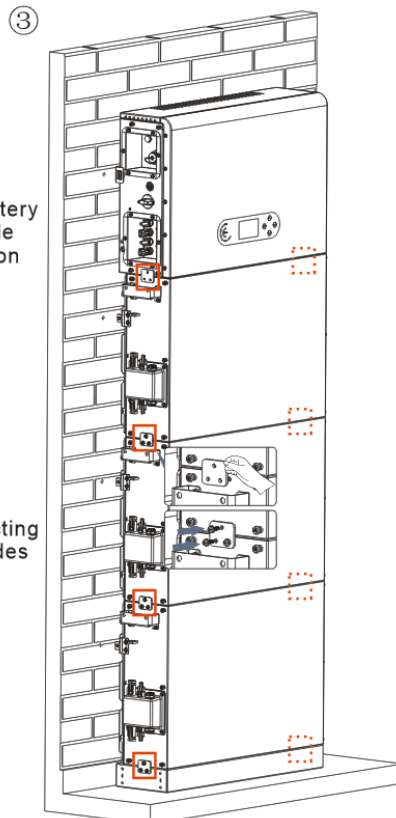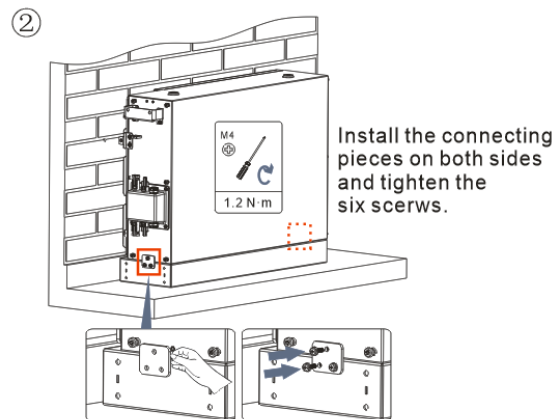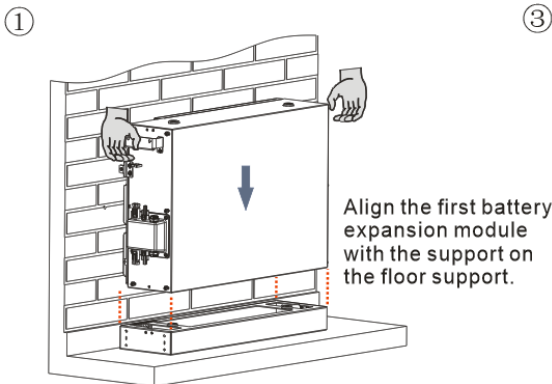


Step 1: Align the first battery module to the base.

Step 2: Install the connectors on both sides and tighten the six screws using a cross screwdriver.

Step 3: Install the remaining battery modules and inverter from bottom to top. (Before installing the next module, ensure that the screws on the side connectors of the previous module are firmly tightened).

Installing the support panel:

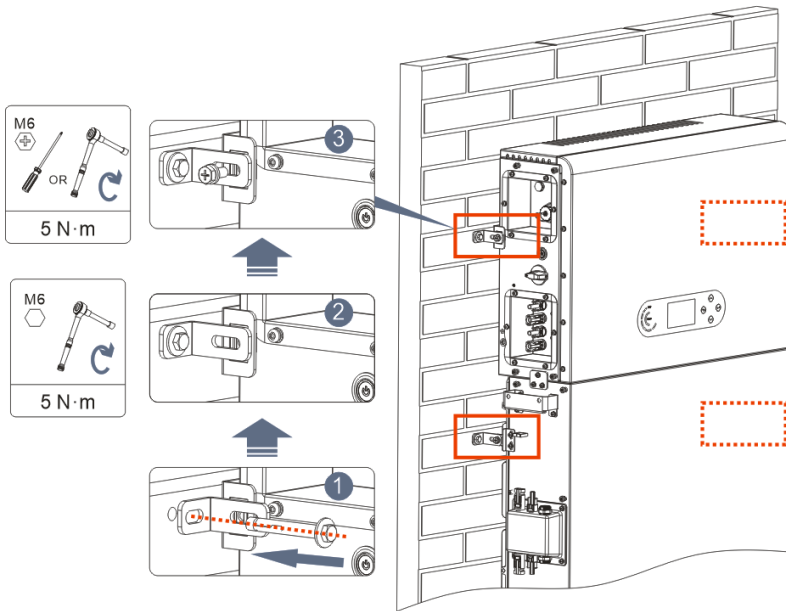

Step 1: Use an impact drill (\varnothing 8 mm, depth 60-65 mm) to drill the holes. Reposition and drill the holes in case of significant deviation.


Step 2: Install support panel B on the wall and fasten the expansion bolt.

Step 3: Adjust support panel A, making sure that the holes on both panel A and B are perfectly aligned.


Step 4: Connect and secure panel A and B using M6*16 screws.

Installing the cover:

After ensuring the correctness and reliability of the electrical connections, install the outer protective cover and secure it with the screws.

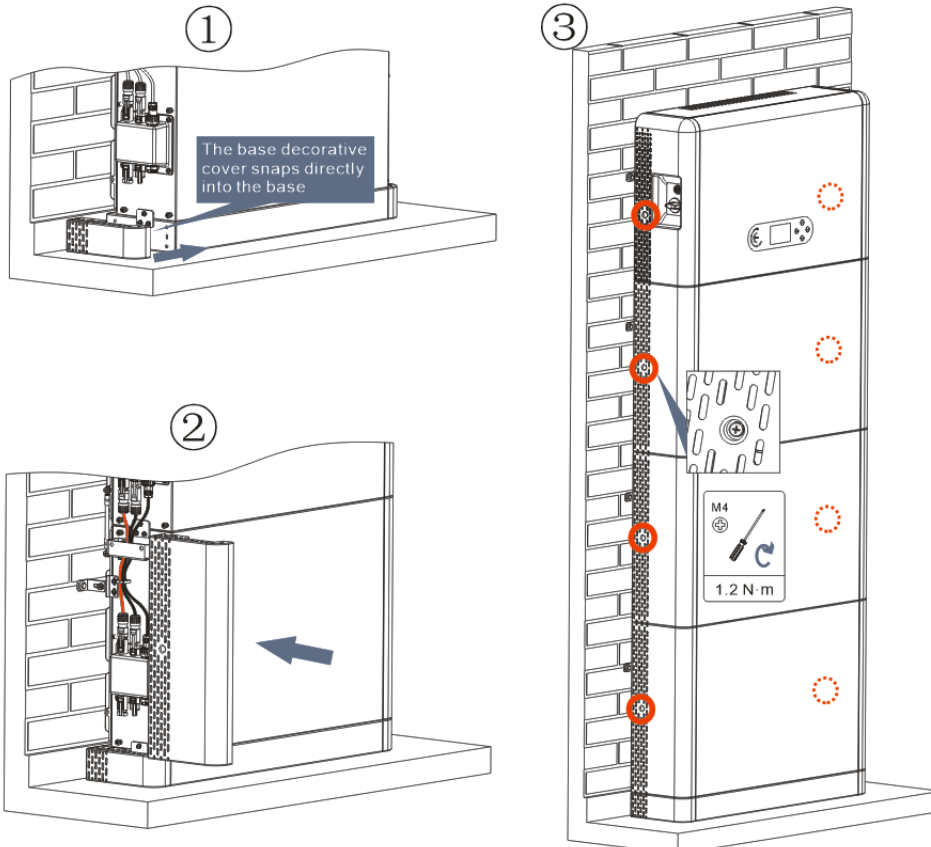

3. DISPLAY & BUTTONS

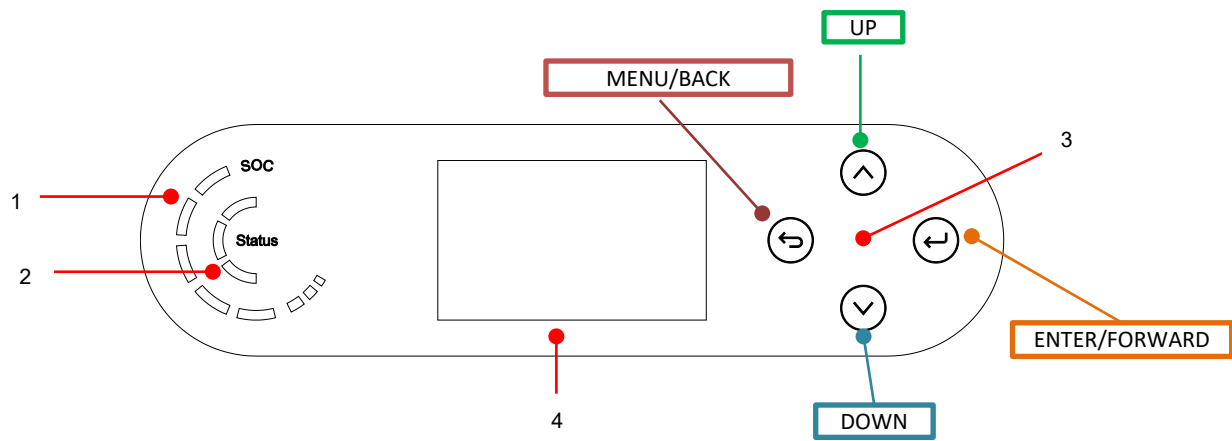

1	System power indicator	3	Button
2	System status indicator	4	LCD screen

Icon	Battery capacity
	80-100%
	60-80%
	40-60%
	20-40%
	0-20%

System status	Indicator		
	Blue LED	Green LED	Red LED
On-Grid	On		
Standby (On-Grid)	Intermittent		
Off-Grid		On	
Alarm			Intermittent

4. MAIN MENU

From the main menu, press “Menu/Back” to enter the main menu.



Main menu
1. Basic settings
2. Advanced settings
3. Statistics
4. System Info
5. Event list
5. Software Update
7. Real-time battery info

1. Language
2. Date and Time
3. Safety parameters
4. Working mode
5. Self-test
6. EPS Mode
7. Commun. Address. Select.

PWD: 0715

1. Battery parameters
2. Active battery
3. Feed-in limit
4. IV Curve Scan
5. Logic interface
6. Factory reset
7. Parallel settings
8. Bluetooth Reset
9. CT Calibration
10. Set electricity meter
11. Neutral Point Grounding

1. Inverter Info
2. Battery Info
3. Safety parameters
4. Debug info
5. PCU info
6. BMS info

1. List of current events
2. List of historical events

PWD: 0715


Start Update ...

Statistics:


Today	Week	Month	Year	Life Cycle
PV prod.	PV prod.	PV prod.	PV prod.	PV prod.
AutoCon	AutoCon	AutoCon	AutoCon	AutoCon
Export	Export	Export	Export	Export
Consumption	Consumption	Consumption	Consumption	Consumption
AutoCon	AutoCon	AutoCon	AutoCon	AutoCon
Import	Import	Import	Import	Import

5. CONNECTING TO THE GRID


Step 0: Select the suitable cable type and specifications.

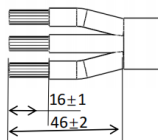


Step 1: Thread the wire through the terminal.

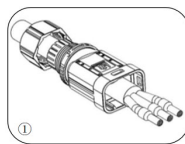


Step 2: Align the wire with the marking, insert it into the hole on the terminal and tighten it.

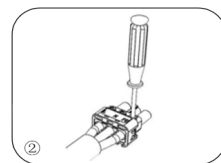

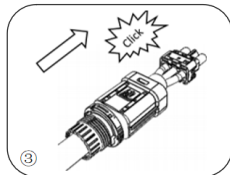

Step 3: Push the terminal forward until a "click" is heard.

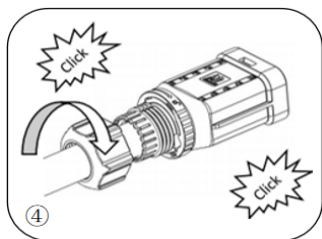

Step 4: Connect the attached load terminal to the inverter's load port and push the terminal forward until it clicks into place.



Item	Description		Recommended cable type	Recommended cable specification
	AC Grid	L (U)	Multi-core copper cable for outdoor use	Cross-section area of the conductor: 8 AWG
		N (W)		
		PE (O)		
	LOAD	L (U)	Multi-core copper cable for outdoor use	Cross-section area of the conductor: 8 AWG
		N (W)		
		PE (O)		



6. PHOTOVOLTAIC CONNECTIONS





Recommended specifications for DC input cables

Cross-sectional area (mm ²)		Outer cable area (mm ²)
Range	Recommended value	
4.0~6.0	4.0	4.5~7.8



Prepare the positive and negative photovoltaic cables.

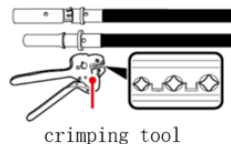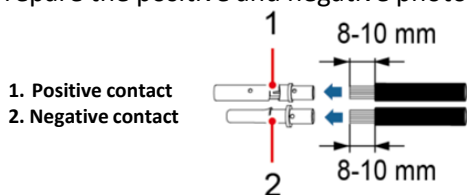


Insert the crimped positive and negative cables into the corresponding photovoltaic connectors.

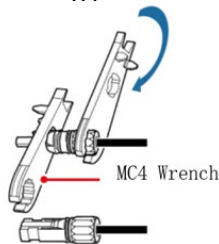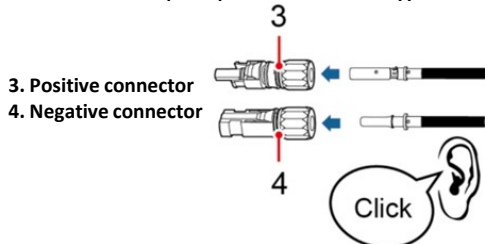

Make sure that the DC parameters of the strings are acceptable according to the technical specifications given in the datasheet and in the Azzurro ZCS configurator. In addition, **check that the polarities of the photovoltaic cables are correct.**

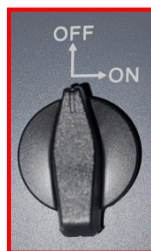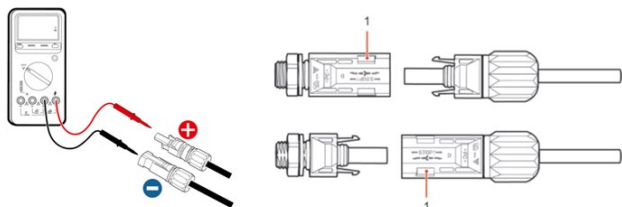

Before removing the positive and negative PV connectors, make sure that the DC rotary circuit breaker is in the OFF position.

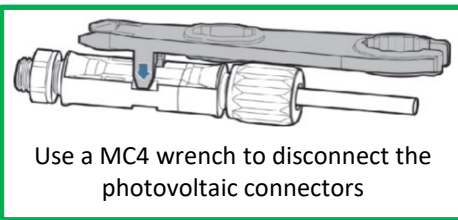


Use a MC4 wrench to disconnect the photovoltaic connectors




ATTENTION Before connecting/disconnecting the strings to the inverter, check that the DC circuit breaker on the side of the inverter is in the OFF position.

NOTE: Both MPPT inputs of the inverter must **be populated**, even if the system has only one string. Use a "Y" cable or a square to split the string.

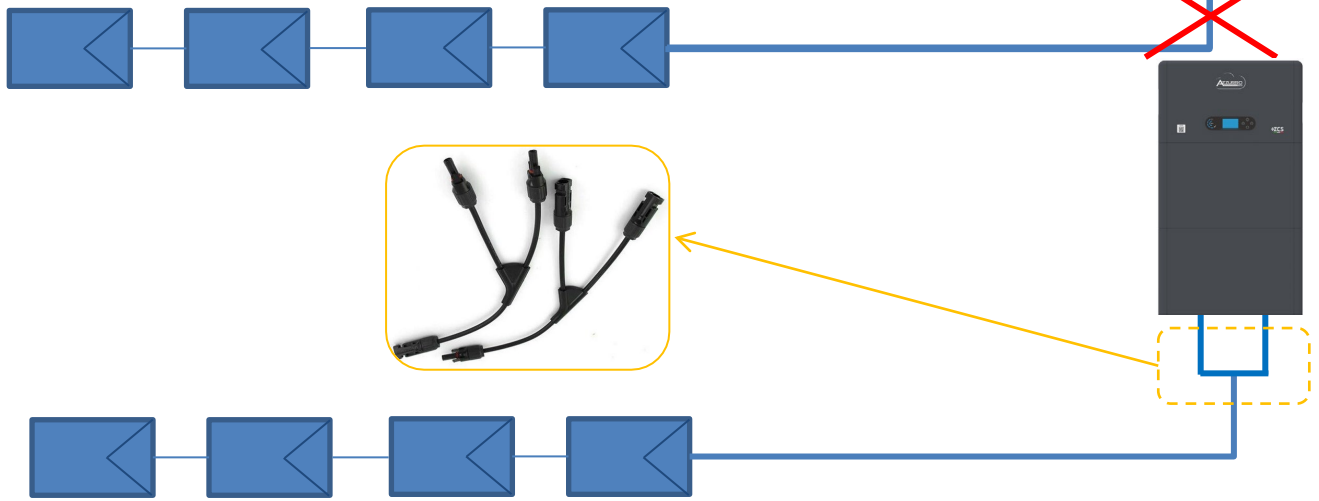


7. COMMUNICATION CONNECTION – COM PORT

Connections for master/slave mode:

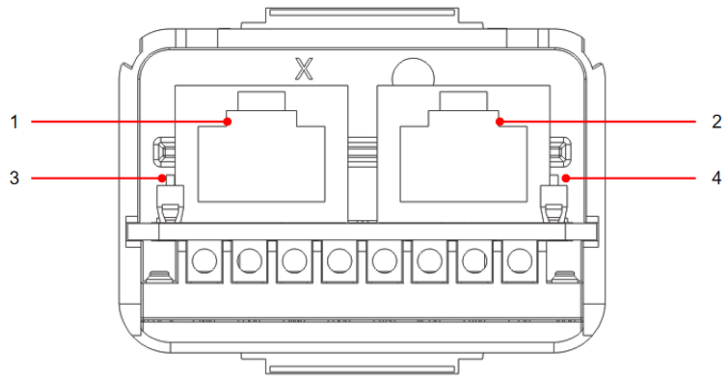

Icon	Definition	Function	Note
1	Link Port 1	Parallel Signal Output	Parallel Signal Port (RJ 45)
2	Link Port 0	Parallel Signal Input	
3	Dip switch Link Port 1	Enables and disables the resistor	The selector can take ON (up dial) and 1 (OFF-down dial). ON means enabled drag and 1(OFF) means disabled drag
4	Dip switch Link Port 0		

Port connection of COM communication:

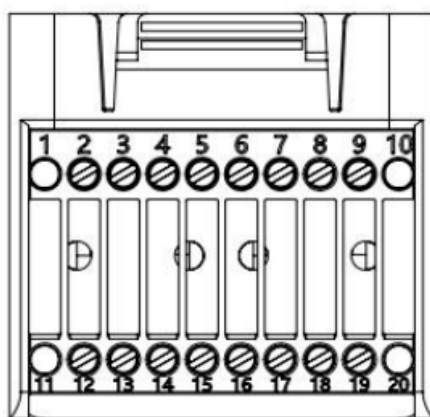


PIN	Definition	Function	Remark
1	N/D	N/D	
2	UC-A	RS485 A (+) differential signal	Inverter monitoring signal 485
3	UC-B	RS485 B (-) differential signal	
4	EN+	RS485 + differential signal	Battery signal 485
5	EN-	RS485- differential signal	
6	MET-A	RS485 A (+) differential signal	Intelligent counter signal 485
7	MET-B	RS485 B (-) differential signal	
8	CAN-H	CAN high-speed data	CAN battery communication signal
9	CAN-L	CAN low-speed data	
10	N/D	N/D	
11	N/D	N/D	
12	GND	Logical interface signal	(DRMS) Logical interfaces for Australia lower than standard (AS4777), General Europe (50549), Germany (4105)
13	D1/5		
14	D4/8		
15	D2/6		
16	D0		
17	D3/7		
18	CT+	Positive output terminal of current transformer	Current transformer communication signal (CT)
19	CT-	Negative pole of current transformer output	
20	N/D	N/D	

Power connections up to 3 batteries (1 channel):

- 1 - Connect the **grounding** cables as shown in the figure.
- 2 - (BAT +, BAT -) of channel **BAT 1** of the **inverter** connected in parallel to (B+, B-) of **battery module 1**.
 - (B+, B-) of **battery module 1** connected in parallel to (B+, B-) of **battery module 2**.
 - (B+, B-) of **battery module 2** connected in parallel to (B+, B-) of **battery module 3**.

Communication connections up to 3 batteries (1 channel):

- 3 - COM 1 of **inverter** → Link Port IN of **battery module 1**.
 - Link Port OUT of **battery module 1** → Link Port IN of **battery module 2**.
 - Link Port OUT of **battery module 2** → Link Port IN of **battery module 3**.
 - Insert the terminating resistor on Link Port OUT of **battery module 3**.

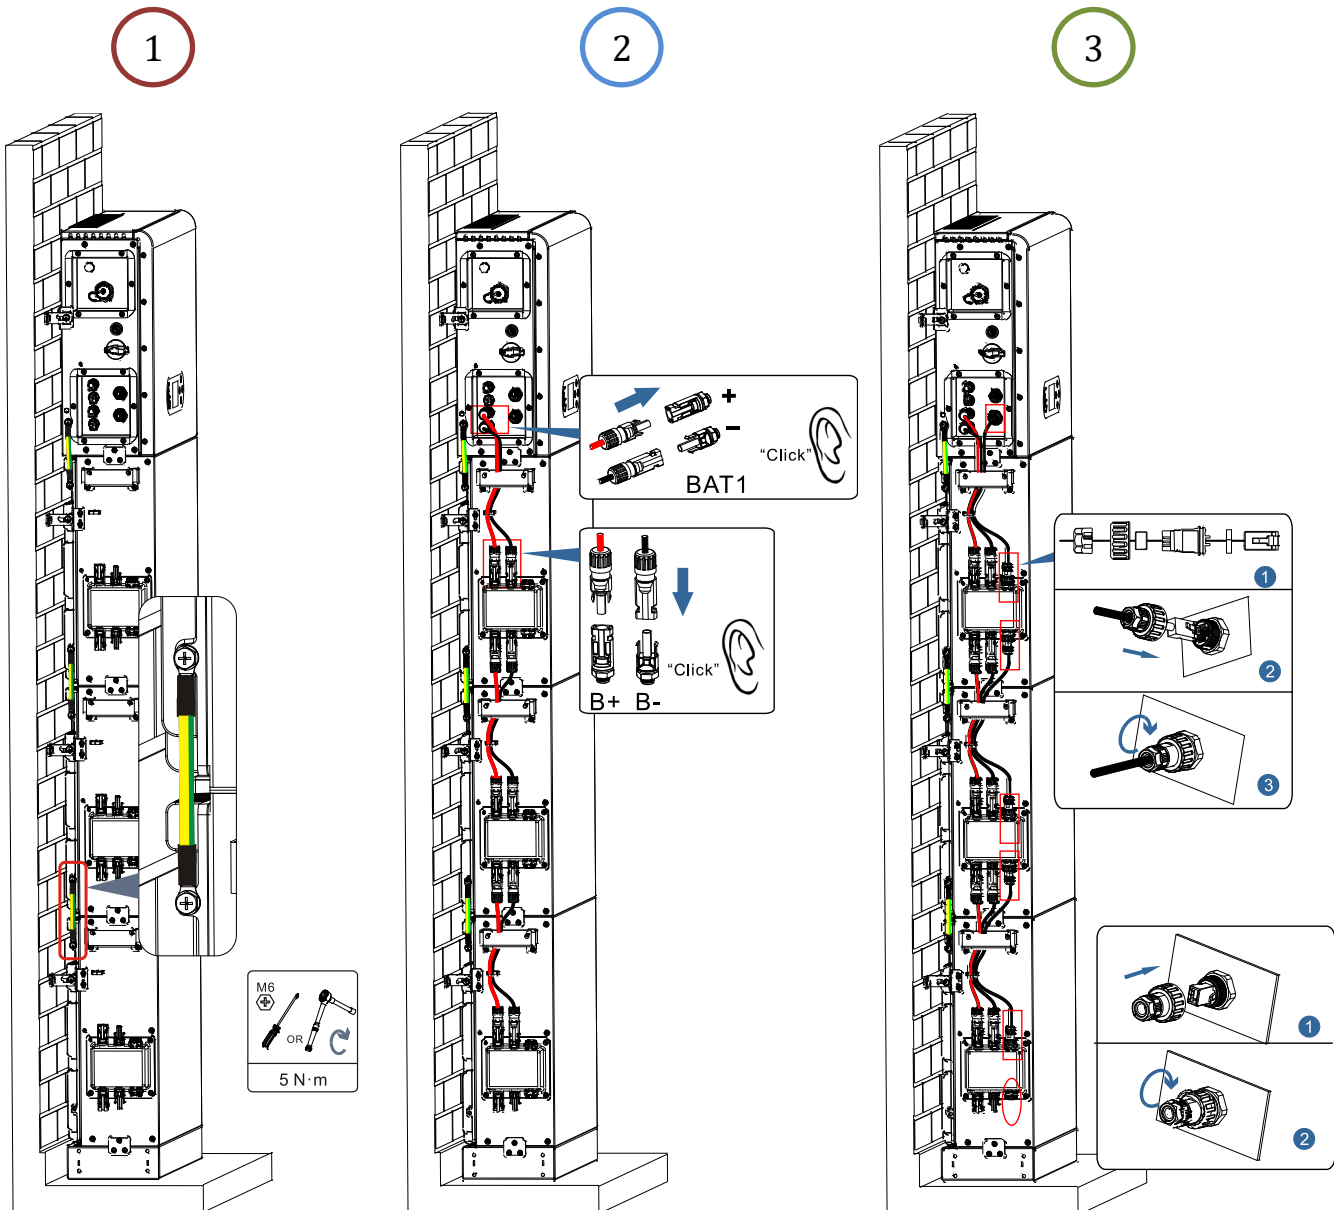

In case of 4 batteries, it is necessary to purchase the extension kit, code ZZT-ZBT5K-EXT-KIT.

Power connections up to 4 batteries (2 channels):

1 - Connect the **grounding** cables as shown in the figure.

- (BAT +, BAT -) of channel **BAT 1** of the **inverter** connected in parallel to (B+, B-) of **battery module 1**.
- (B+, B-) of **battery module 1** connected in parallel to (B+, B-) of **battery module 2**.

2


- (BAT +, BAT -) of channel **BAT 2** of the **inverter** connected in parallel to (B+, B-) of **battery module 3**.
- (B+, B-) of **battery module 3** connected in parallel to (B+, B-) of **battery module 4**.

Communication connections up to 4 batteries (2 channels):

- COM 1 of **inverter** → Link Port IN of **battery module 1**.
- Link Port OUT of **battery module 1** → Link Port IN of **battery module 2**.
- Insert the terminating resistor on Link Port OUT of **battery module 2**.

3


- COM 1 of **inverter** → Link Port IN of **battery module 3**.
- Link Port OUT of **battery module 3** → Link Port IN of **battery module 4**.
- Insert the terminating resistor on Link Port OUT of **battery module 4**.

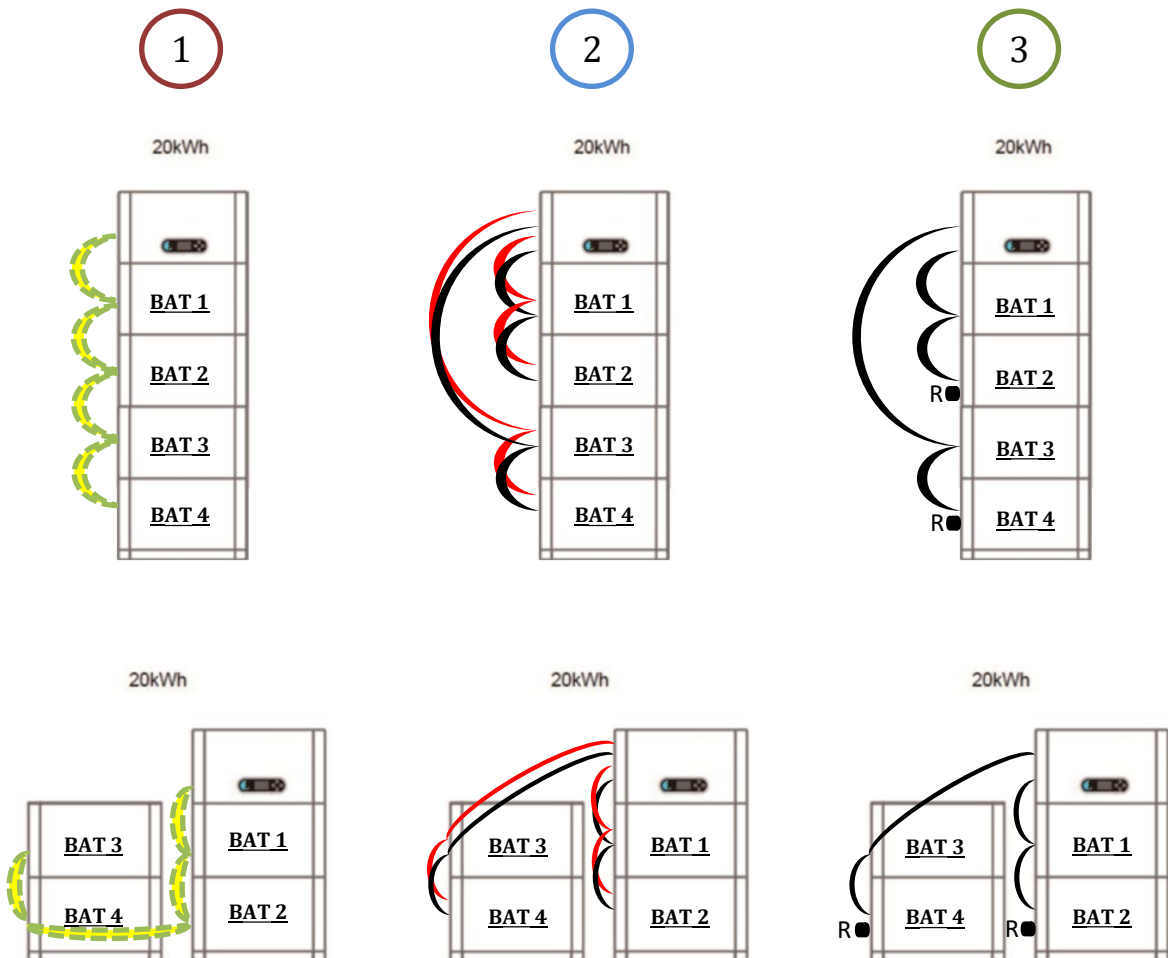

Note: Make sure the cable connections are firmly established.

For systems with a capacity exceeding 15 kWh, the batteries are connected in two independent groups to the inverter's battery input interface.

The battery capacity varies from 5 to 20 kWh (in the case of 4 batteries, it is necessary to purchase the extension kit, code **ZZT-ZBT5K-EXT-KIT**).

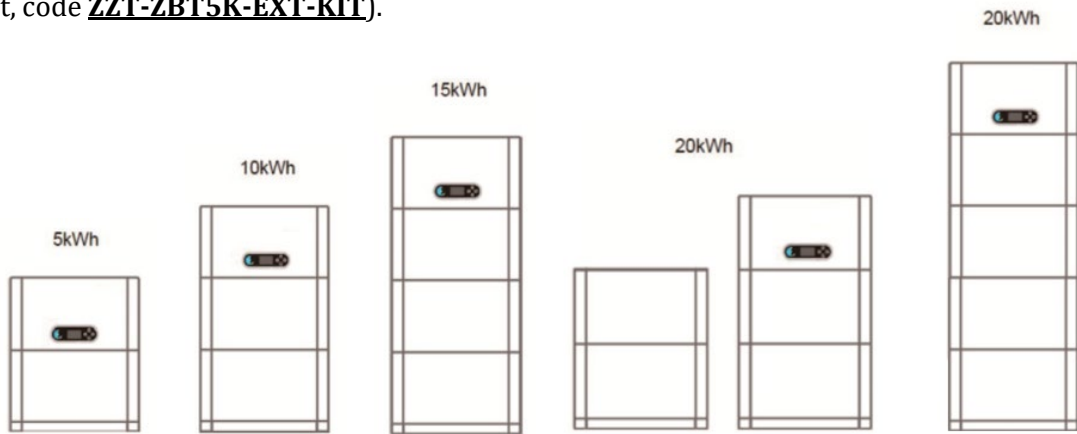

When shutting down the system, ALWAYS DISCONNECT THE AC VOLTAGE by opening the designated switch. **NEVER SWITCH OFF the batteries before disconnecting the AC voltage**, and therefore with the storage system connected to the AC grid.

9.1 SETTING PHOTOVOLTAIC CHANNELS

This model of Inverter set the photovoltaic channels automatically.

Independent mode: If the strings are different (e.g. installed on two separate flaps or consisting of a different number of panels), the input model is independent.

Parallel mode: If the strings are connected in parallel.

9.2 SETTING BATTERY CHANNEL

To set 1 battery channel:

Advanced settings → 0715 → Battery parameters

- No. of batteries:
Group 1 → (enter the number of batteries installed)
Group 2 → 0


- Battery 1:
Depth of discharge: 80%

To set 2 battery channels:

Advanced settings → 0715 → Battery parameters

- No. of batteries:
Group 1 → (enter the number of batteries installed)
Group 2 → (enter the number of batteries installed)

- Battery 1:
Depth of discharge: 80%
- Battery 2:
Depth of discharge: 80%

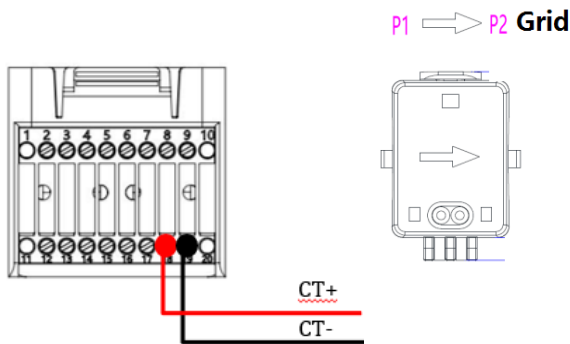

PIN	Definition
19	CT- (black/yellow)
18	CT+ (red)





Use for distances of less than 50 m between the inverter and CT


Connect negative and positive in the sensor respectively to inputs 19 and 18 of the COM connector

POSITIONING OF CT SENSOR:

- ✓ *Positioned at the output of the import/export meter* so that all incoming and outgoing power flows can be read, it must include all phase cables entering or exiting the meter.
- ✓ The *direction of the CT is independent of the installation*, and is recognised by the system during the first start-up, always verify by means of tests that the readings are correct.

Use an 8-pin, category 6 **STP** cable as an **EXTENSION CABLE**; use all the coloured pins (blue-orange-green-brown) to extend the positive cable of the CT and all the white/coloured pins (white/blue-white/orange-white/green/brown) to extend the negative cable of the CT. The shield must be grounded on one of the two sides.

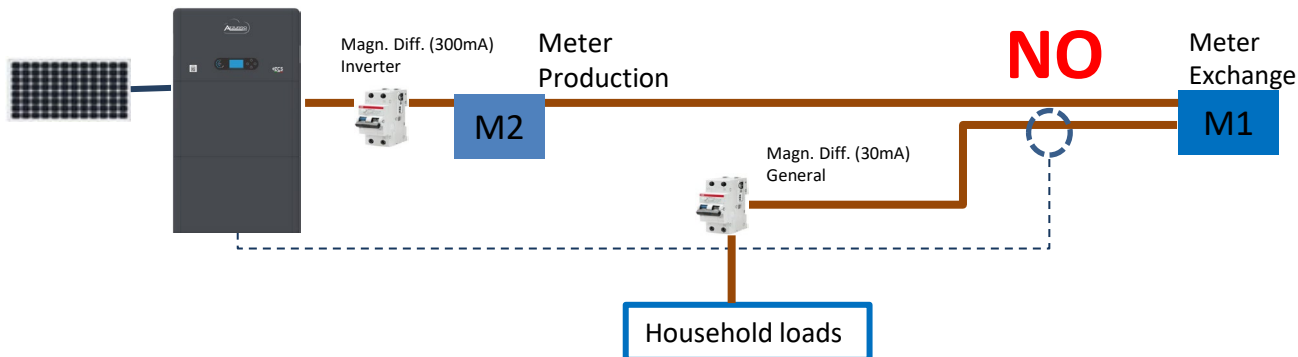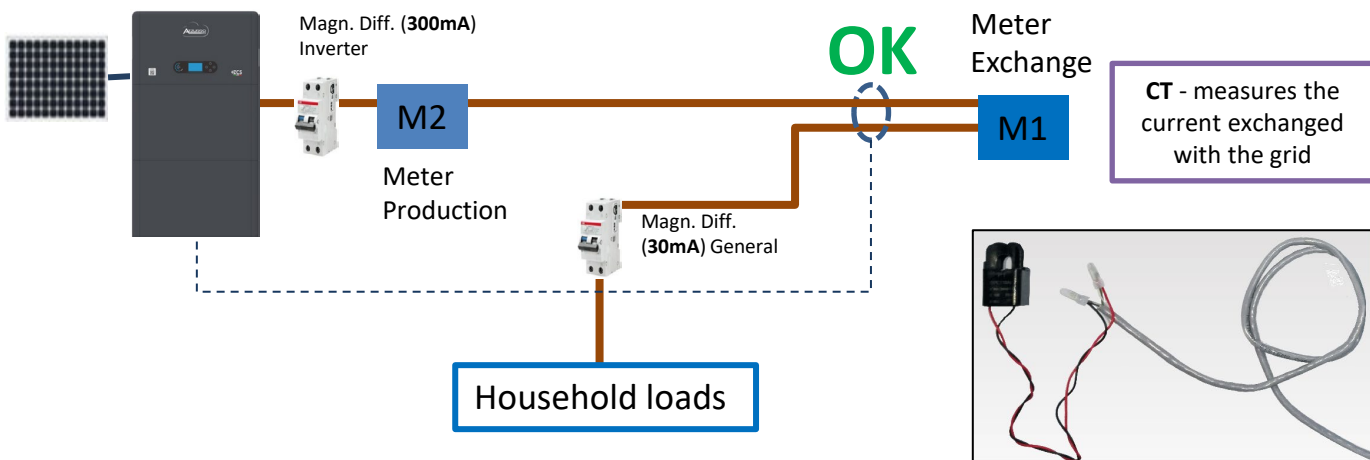

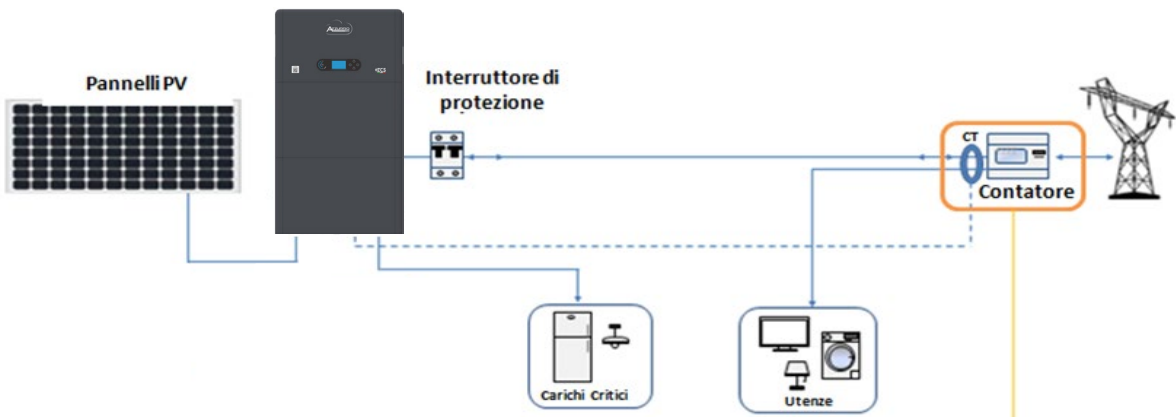


The sensor must include all phase cables entering or exiting the meter.



10.2 MEASURING EXCHANGE VIA DDSU METER




PIN INVERTER	PIN METER	Note
6	→ 24	Communication of the Exchange Meter
7	→ 25	

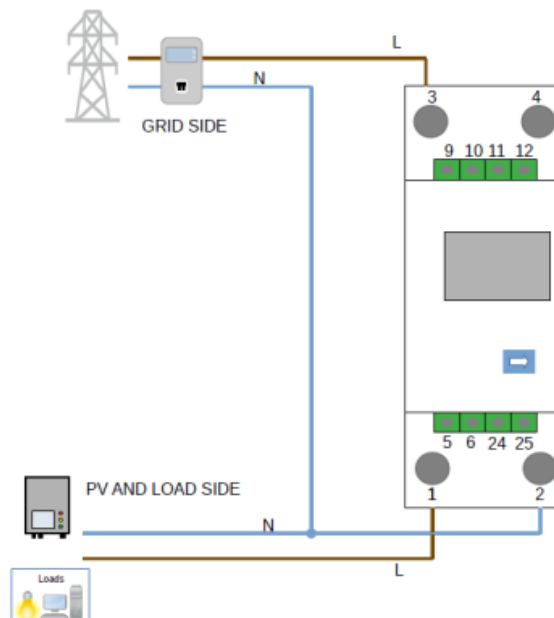


DDSU meter connections

1. Connect Meter and inverter via the RS485 serial port.
On the Meter side, this port is identified by **PINs 24 and 25**.


On the inverter side, use the connection port identified as "COM" by connecting **PINs 6 and 7**.

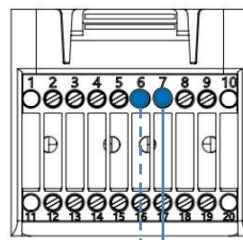

Meter on Exchange

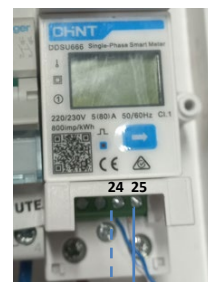

2. Connect the Meter in "direct connect" mode, specifically:
- ✓ Connect PIN 2 of the Meter to the neutral cable (N);
 - ✓ Connect PIN 3 respectively to the Exchange meter direction phase;
 - ✓ Connect PIN 1 to the photovoltaic system and loads direction phase.

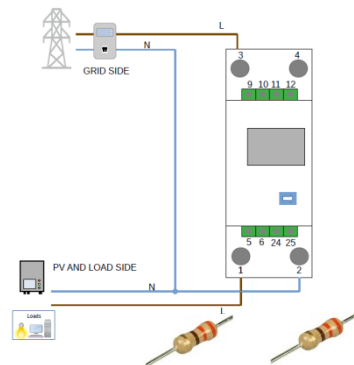

NOTE: For **distances** between the meter and hybrid inverter of **more than 100 metres**, it is recommended to connect two 120 Ohm resistors along the 485 daisy chain: the first to the inverter (between PINs 6 and 7 of the inverter COM), the second directly to the meter (PINs 24 and 25).



10.2.1 DDSU METER SETTING ON EXCHANGE AND INVERTER

1. Press the button to check that the Meter address is set to **001**.
In addition to what is described above, the display shows the values of:

- ✓ Current;
- ✓ Voltage;
- ✓ Power factor;
- ✓ Power.



Address



Current



Power












Voltage




Power Factor

2. To configure the Meter reading on the inverter, access the inverter display (as shown in the figure):

1. First button on the left of the inverter;
2. Advanced settings;
3. Enter password "0715";
4. Set PCC Meter;
5. Enable;
6. Ok.

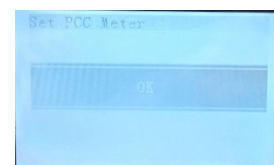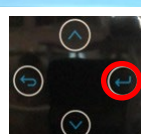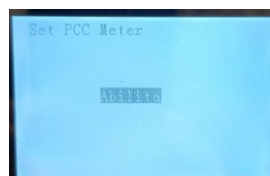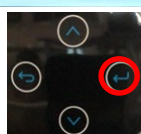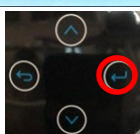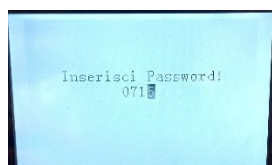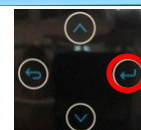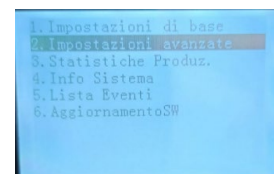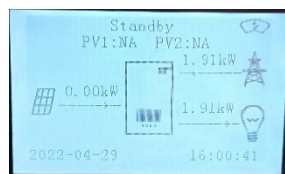


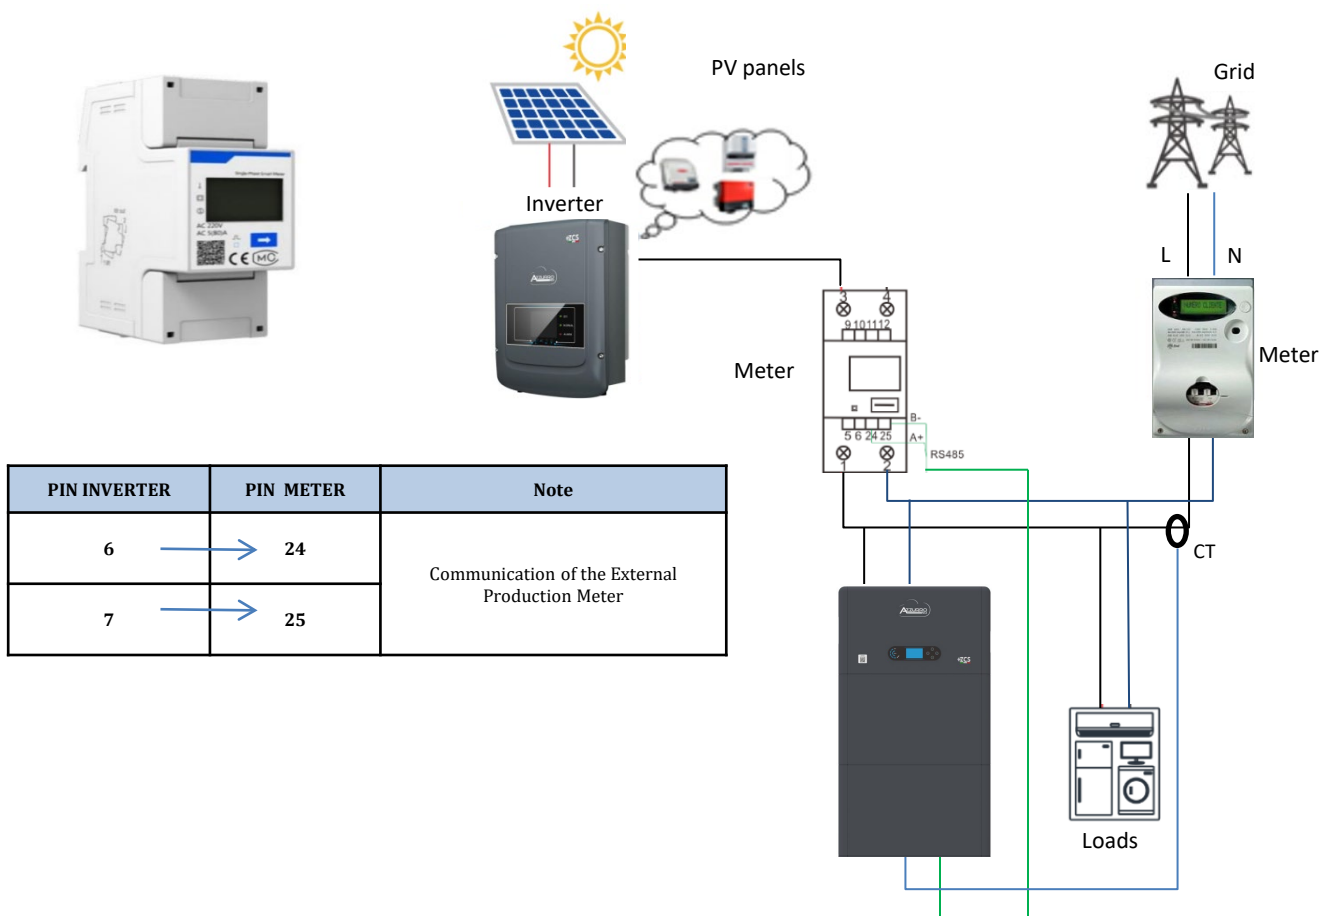


DDSU meter connections

1. Connect Meter and inverter via the RS485 serial port.


On the Meter side, this port is identified by **PINs 24 and 25**.

On the inverter side, use the COM port by connecting **PINs 6 and 7**

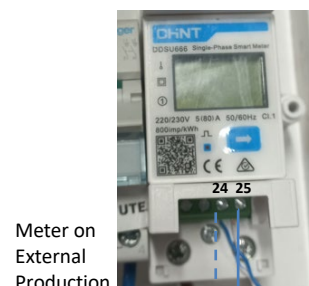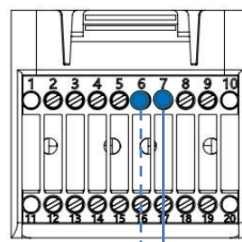


2. Connect the Meter in “direct connect” mode, specifically:

- ✓ Connect PIN 2 of the Meter to the neutral cable (N);
- ✓ Connect PIN 3 respectively to the external production direction phase;
- ✓ Connect PIN 1 to the new photovoltaic system and loads direction phase.

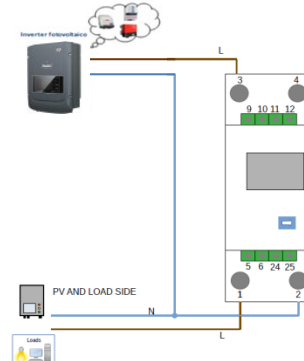

NOTE: For **distances** between the Meter and hybrid inverter **greater than 100 meters**, it is recommended to connect two 120 Ohm resistors along the 485 daisy chain: the first to the inverter (between PINs 6 and 7 of the inverter COM), and the second directly to the Meter (PINs 24 and 25).

10.2.3 DDSU METER SETTING ON EXTERNAL PRODUCTION

1.1 Press the  button to check that the Meter address is set to **002**.

In addition to what is described above, the display shows the values of:

- ✓ Current;
- ✓ Voltage;
- ✓ Power factor;
- ✓ Power.



Address



Current



Power




Voltage



Power Factor


1.2 Production meter address setting:

Press and hold  for 5 sec to enter settings menu



The protocol type and the modbus address will alternate




As soon as the screen with the modbus address number appears, press the  to increase the number



2. No configurations are required on the inverter for the external production meter setting.

10.2.4 CONFIGURING DDSU EXCHANGE METER AND DDSU PRODUCTION METER

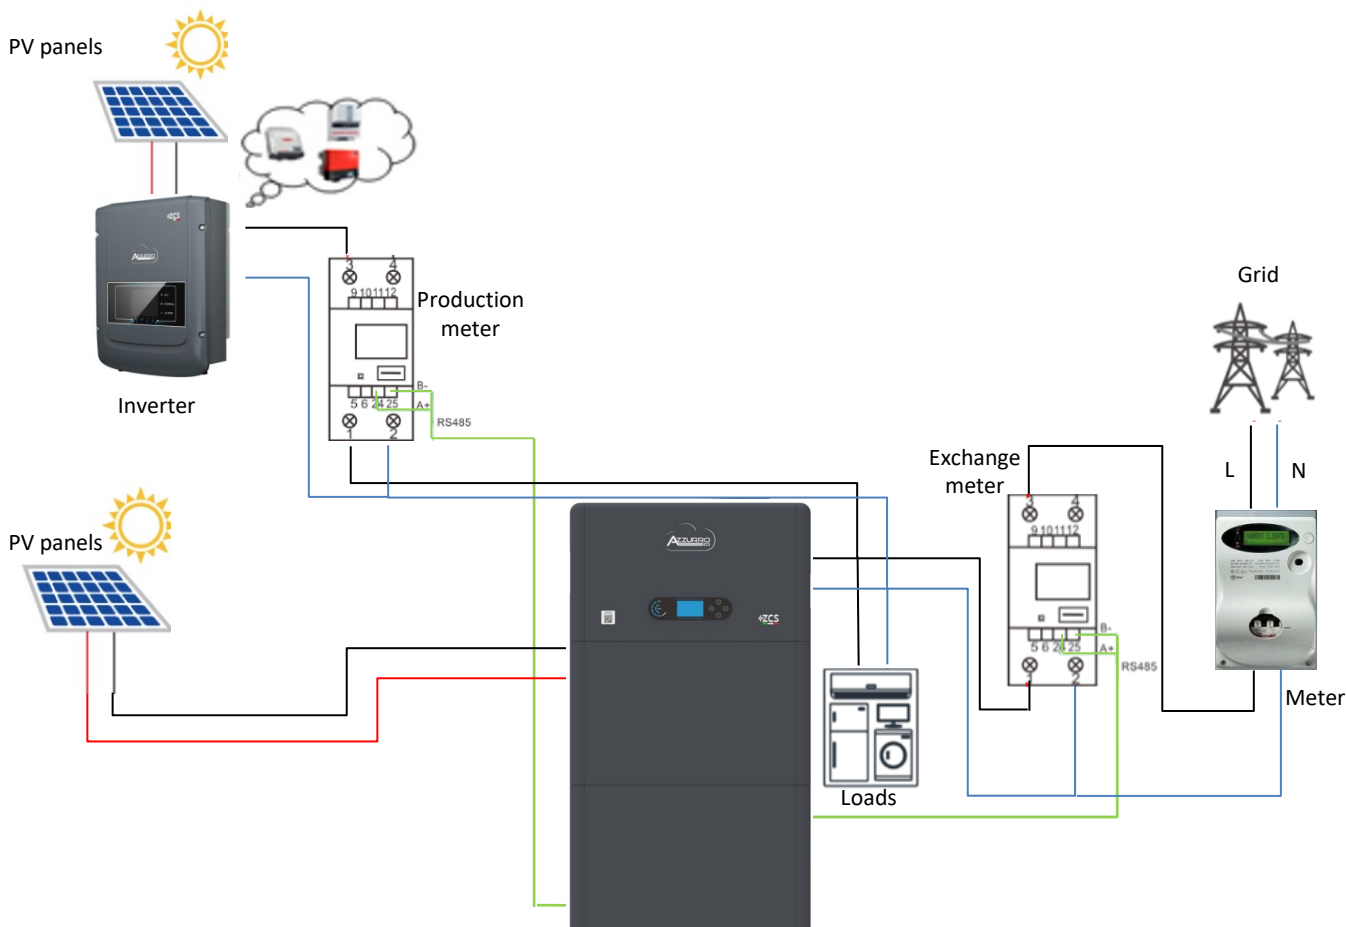


10.2.5 CHECKING CORRECT DDSU METER METER READING

In order to check the correct reading of the **meter on exchange**, turn off the hybrid inverter and any other PV production sources.


Switch on loads greater than 1 kW.

Stand in front of the meter and use the keys

“” to scroll through the items, make sure that:

Power P is:

- Greater than 1 kW.
- In line with home consumption.
- The sign in front of each negative value (-).

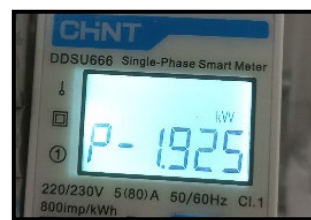


In the case of a **meter for reading the production of existing photovoltaic systems**, repeat the previous steps:


1. This time the sign of the powers must be positive for P.
2. Switch on the Hybrid Inverter, leaving the DC-side PV switch in the OFF position, check that the total external PV power value (Pt) is in line with the value shown on the inverter's display.

10.3 READING VIA DDSU METER

Single-line diagram of hybrid inverter with meter reading mode on exchange only



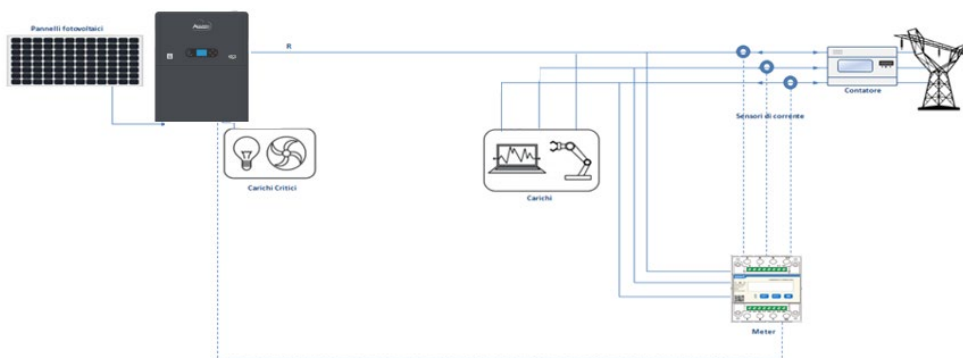


Single-line diagram of hybrid inverter with meter reading mode on exchange and external production

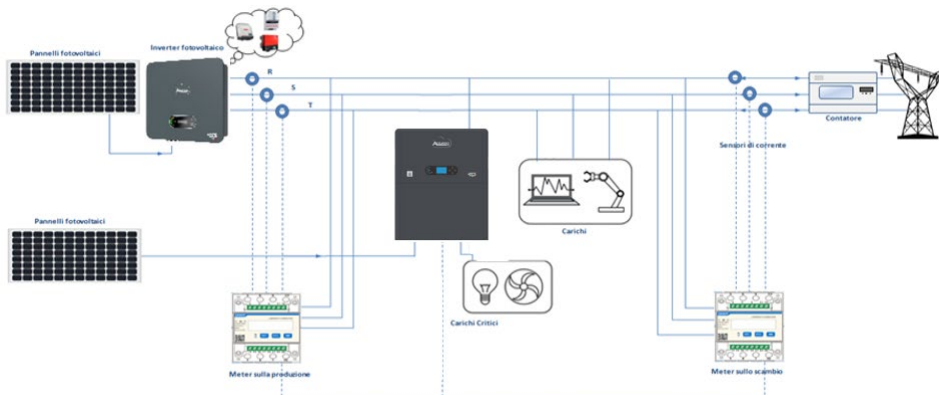

DTSU meter connections – with COM port

Meter on
External
Production

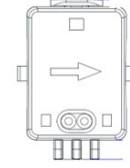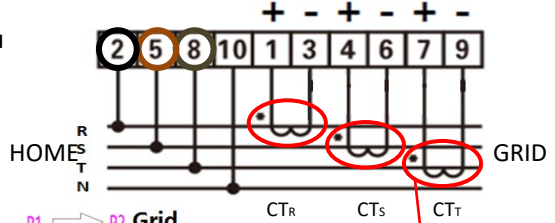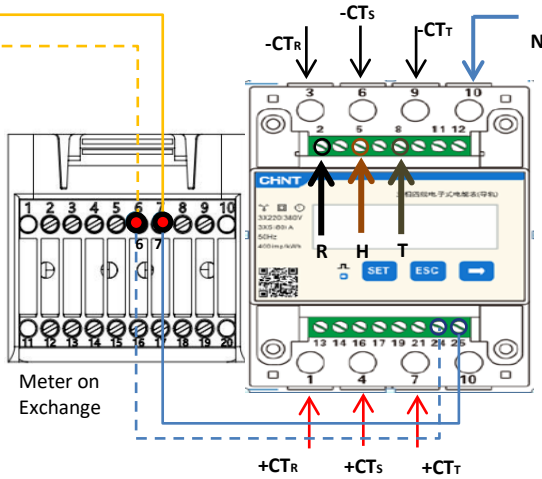

1. Connect Meter and inverter via the RS485 serial port.
On the Meter side, this port is identified by **PINS 24 and 25**.
On the inverter side, use the connection port identified as "COM" by connecting **PINS 6 and 7**.

2. Connect PIN 10 of the Meter to the neutral wire (N), connect PINS 2, 5 and 8 to phases R, S and T respectively.
CT connections, the terminals of the sensor positioned on **phase R** must be connected to **PIN 1 (red wire)** and **PIN 3 (black wire)**.
The terminals of the sensor positioned on **phase S** must be connected to **PIN 4 (red wire)** and **PIN 6 (black wire)**.
The terminals of the sensor positioned on **phase T** must be connected to **PIN 7 (red wire)** and **PIN 9 (black wire)**.
Position the sensors, paying attention to the direction on the sensor itself (arrow pointing towards the grid).
ATTENTION: hook the CT sensors to the phases only after connecting them to the Meter.



NOTE: For **distances** between the meter and hybrid inverter of **more than 100 metres**, it is recommended to connect two 120 Ohm resistors along the 485 daisy chain: the first to the inverter (between PINS 6 and 7 of the inverter COM), the second directly to the meter (PINS 24 and 25).

PIN INVERTER	PIN METER	Note
6	24	Meter communication
7	25	

DDSU METER SETTING ON EXCHANGE AND INVERTER

- Press the button to check that the Meter address is set to **001**.
In addition to what is described above, the display shows the values of:
 - ✓ Current;
 - ✓ Voltage;
 - ✓ Power factor;
 - ✓ Power.
- To configure the Meter reading on the inverter, access the inverter display (as shown in the figure):
 - First button on the left of the inverter;
 - Advanced settings;
 - Enter password "0715";
 - Set PCC Meter;
 - Enable;
 - Ok.

10.3.1 SETTING DTSU METER

To configure the device in read mode on the exchange, enter the settings menu as shown below:

- Press **SET** and the word **CODE** will appear
 - Press **SET** again
 - Enter the number "701":
 1. From the first screen where the number "600" will appear, press the "→" key once to write the number "601".
 2. Press **SET** twice to move the cursor left, highlighting "601";
 3. Press the "→" key once more to write the number "701"
- Note:** In case of error, press "ESC" and then "SET" again to reset the required code.



- Confirm by pressing **SET** and to enter the settings menu.
- Enter into the following menus and set the parameters indicated:

1. **CT:**
 - a. Press **SET** to enter the menu
 - b. Write "40":
 - a. From the first screen where the number "1" appears, press the "→" key repeatedly until the number "10" is written.
 - b. Press **SET** once to move the cursor left, highlighting "10"
 - c. Press the "→" key repeatedly until the number "40" is written.
 - d. Press "ESC" to confirm and "→" to scroll to the next setting.



Note: In case of CT sensors other than those supplied, enter the correct transformation ratio.

Note: In case of error, press "SET" until the thousand digit is highlighted and then press "→" until only the number "1" is displayed; at this point, repeat the above procedure.

2. ADDRESS:

- a. Press **SET** to enter the menu:
- b. Leave "01" for Meter on exchange
- c. Write "02" (by pressing "→" once from screen "01"). With address 02, the inverter assigns the data sent by the meter as production power. A maximum of 3 meters can be set for the production (Addresses 02, 03 and 04)



Meter on Exchange



Meter on Production

- d. Press "ESC" to confirm.


10.3.2 CHECKING CORRECT DTSU METER READING

In order to check the correct reading of the **meter on exchange**, turn off the hybrid inverter and any other PV production sources.

Activate loads greater than 1 kW for each of the system's three phases.

Stand in front of the meter and use the "→" keys to scroll through the items, and "ESC" to go back, checking that:


1. The Power Factor values for each phase Fa, Fb and Fc (representing the phase shift between voltage and current) fall within the range of 0.8 to 1.0. If the value is lower, move the sensor to one of the other two phases until the value falls within the specified range.

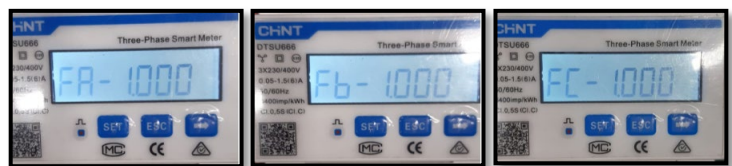

2. The Pa, Pb and Pc Powers are:

- Greater than 1 kW.
- In line with home consumption.
- The sign in front of each negative value (-).

In the case of a positive sign, reverse the direction of the toroidal winding in question.

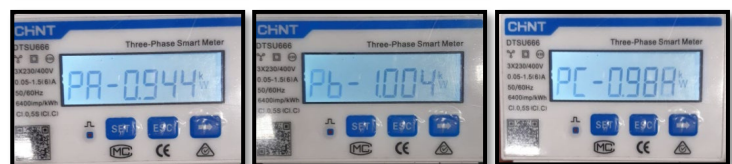


For meters used to read the production of existing photovoltaic systems, repeat the previous steps as follows:

1. Check the Power Factor as described in the previous case.
2. This time, ensure that the sign of the powers (Pa, Pb, and Pc) are positive.
3. Switch on the Hybrid Inverter, and check that the total PV power value (Pt) matches the value displayed on the inverter's screen.

11. INITIAL SET UP PROCEDURE


Make sure that the AC switch of the inverter is open and that no voltage is present on the inverter's terminal block.

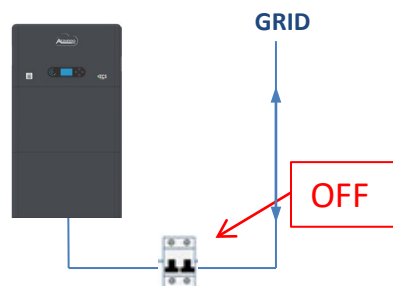

Check that the DC circuit breaker of the inverter is in the OFF position.



Make sure there is a household load of at least 200 W by using a current clamp to measure under the import/export meter.

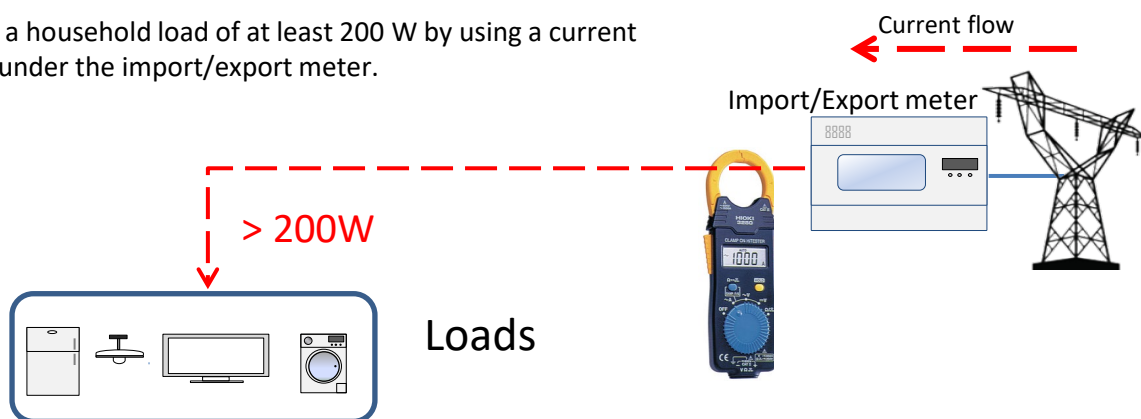



Switch on the batteries:

- 1) Set the disconnect switch to ON;
- 2) Press the button.

Once pressed, the button will light up and the internal contact will close.



Turn ON the AC circuit breaker located between the inverter and AC grid.

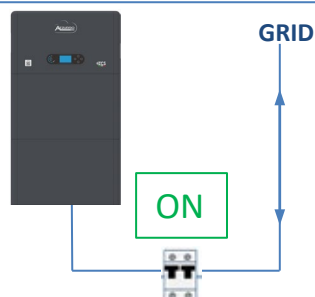

To supply DC voltage to the hybrid inverter, turn ON the circuit breaker



12. INITIAL SET-UP

IMPORTANT: Use a PC and a USB stick to perform any updates or adjust the country code settings.




Parameter	Note
1. Language option	The default setting is English.
*2. Setting and confirming system time	If the inverter is connected to the host computer as the App of the collector or for mobile devices, the time should have been calibrated to local time.
**3. Importing safety parameters	Find the safety parameters file (named after the corresponding country) on the website, download it onto the USB flash drive and import it.
***4. Setting battery parameters	Default values are shown according to the input channel configured
5. Set-up is complete	

*2. Importing and confirming system time

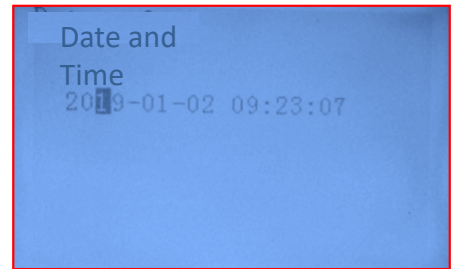


**3. Importing safety parameters (country code)



Code	Region	Code	Region
000		000	
001		001	
002	Germany	019	IEC EN61727
003		020	Korea
004		001	Korea-DASS
001		021	Sweden
001	Italy	022	EU General
002		001	EU General-MV
003		002	EU General-HV
004		024	Cyprus
000		000	Cyprus
002	Australia	025	India
008		001	India-MV
009		002	India-HV
000		000	PHI
001		001	PHI-MV
000		026	Philippines
001		000	New Zealand
002		001	New Zealand-MV
003	Spain	002	New Zealand-HV
004		000	Brazil
000		001	Brazil-LV
001		002	Brazil-230
002		003	Brazil-254
003		004	Brazil-288
004	Turkey	028	Brazil
000	Denmark	000	SK-VDS
001		001	SK-SSE
002		002	SK-ZSD
006	Greece	029	Slovakia
000		030	
001	Netherlands	031-032	
002		033	Ukraine
008	Belgium	034	Norway
001		001	Norway-LV
009	UK	035	Mexico
000		G98	Mexico-LV
001		036-037	
002		G99-HV	60Hz
010	China	038	000
000		039	Ireland EN50438
001		040	Ireland
002		000	Thailand
003		001	Thai-PEA
004		041	Thai-MEA
005		042	50Hz
006		043	LV-50Hz
007		044	000
008		001	South Africa
009		045	SA
011	France	046	SA-HV
001		001	Dubai
002		047-106	DEWG
003		107	DEWG-MV
012	Poland	108	Croatia
000		109	Lithuania
001		110	Lithuania
002		111	000
003		001	Columbia
013	Austria	112-120	Columbia
000		121	Columbia-LV
001		122	000
014	Japan	123	Saudi Arabia
003	Switzerland	000	IEC62116
16-17		000	Latvia
		000	Romania


To set the correct country, upload the unzipped folder called "safety" onto the USB flash drive. This folder can be downloaded from the website <https://www.zcsazzurro.com/it/documentazione/ea-sy-power-one-all>

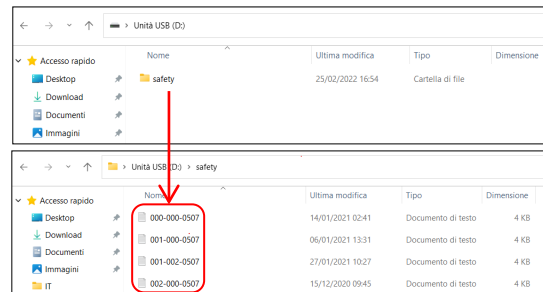


NOTE: By default, the internal interface of the inverters are set to the CEI-021 country code, if a different country code is required, please contact technical support.

13. CHECKING THE CORRECT OPERATION


1) Turn OFF the PV circuit breaker and disconnect the inverter from the grid

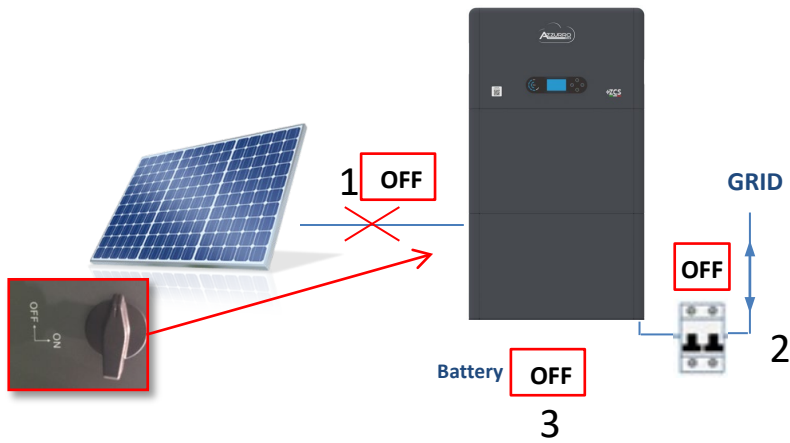


2) Restore AC voltage by activating the dedicated switch:

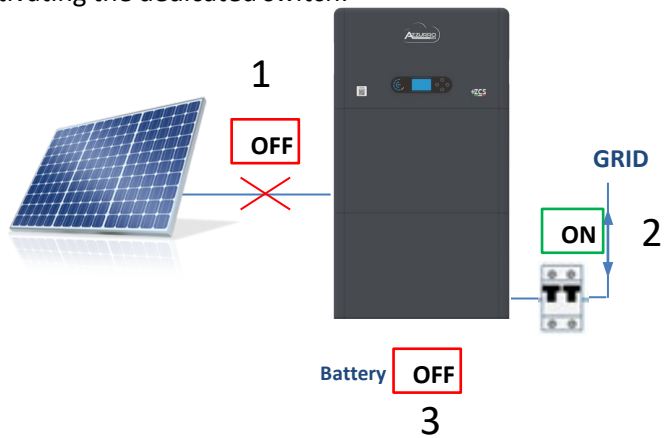

3) Check that the power value shown on the grid display closely matches the power consumption shown on the meter, or measure using a current clamp under the import/export meter.

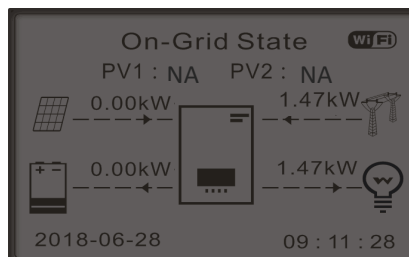


4) Switch on the photovoltaic system by flipping the DC circuit breaker to the ON position

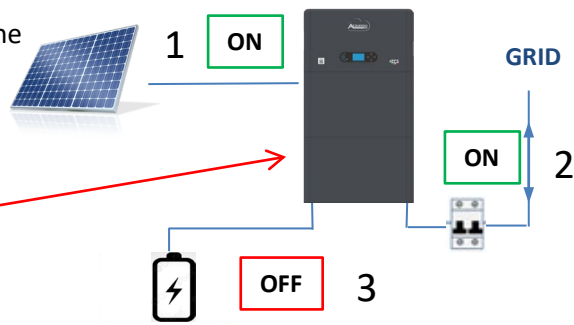

After activating the photovoltaic system, check that:



The consumption value 1.47kW remains constant as the photovoltaic power output increases. 3.50kW

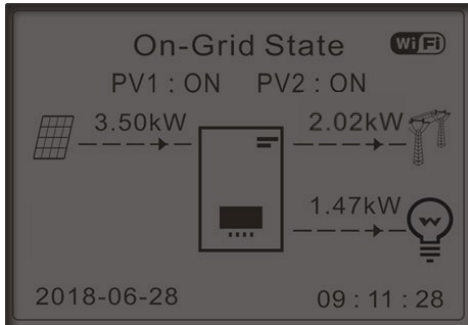

- * Check that the power of the loads in use does not change:
- Heat pumps or pumps → Load may vary over time
 - Lights or hairdryers → Load remains constant over time

5) Switch on the battery or batteries, ensuring that the system operates in the mode described in the section **OPERATING STATUSES IN AUTOMATIC MODE:**

- PV > Load → battery charging
- PV < Load Battery discharging
- PV = Load Battery on stand-by

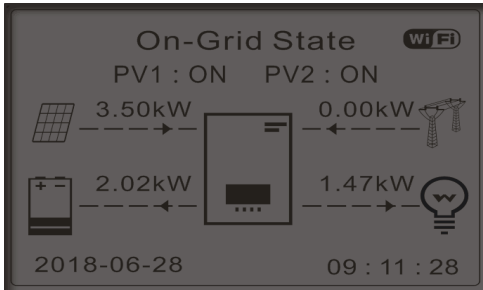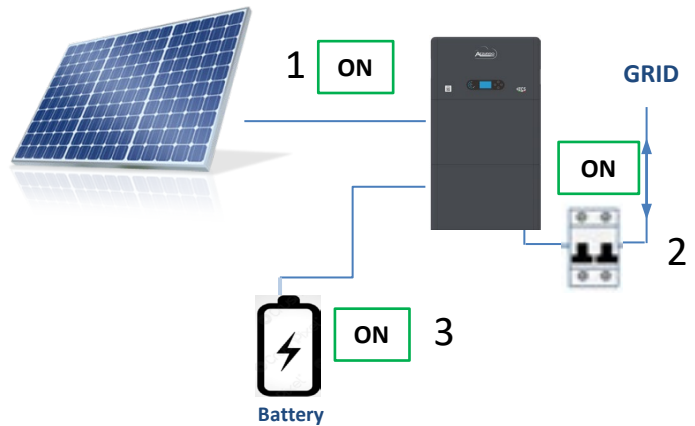

NOTE: At the initial start-up, the batteries will charge up to 100%



Note: If the conditions described above are not met:
 • Check that the current sensor is correctly positioned and then proceed with restarting the system.



14. CHECKING THE INVERTER SETTINGS

To check whether the parameters have been correctly set, enter the display menu and go to “Inverter Info.” Check the data, especially those highlighted:

Inverter Info (1)	
Serial number:	ZQ1025003KE233100073
Hardware version:	V001
Software version:	Press enter to view!
Safety firmware version:	V02000

➤ Serial number of the machine

➤ Hardware version

➤ Software version installed

➤ Service Code Version

Inverter Info (4)	
IV Curve Scan :	Disabled
Logic interface:	Disabled

➤ Information on MPPT scan mode

➤ Information on DRMS0 mode (enable only for Australia)

Inverter Info (2)	
Country:	001-000
Power level:	6 kW

➤ Country code for the standard

➤ Max inverter power

Inverter Info (5)	
Power Factor :	1.00
Zero grid feed-in mode :	Disabled
Insulation resistance:	7000KOhm

➤ Power factor value

➤ Information on maximum grid in-feed mode

➤ Measured value of the insulation resistance

Inverter Info (3)	
PV Input Mode :	Independent
Working mode :	Automatic mode
RS485 address :	01
EPS :	Disabled

➤ Photovoltaic input mode (Independent / Parallel)

➤ Information on operating mode (must be automatic)

➤ Communication address (value must be different from 00)

➤ Information on EPS mode

15. ZERO FEED-IN MODE

2. Advanced settings **Enter 0715**

2. Anti-reflux (Limit. -feed-in)

The “Anti Reflux Control” mode can be enabled to limit the maximum power exported to the grid. The set reflux power corresponds to the desired maximum export power to the grid.

1. Anti-reflux control →

Enabled



Disabled

2. Reflux power →

***KW

16. LOGIC INTERFACE (DRMS0)

2. Advanced settings

 Attention: this function must be disabled!!!! 

4. Logic interface

→

Enabled

no

→

Inactive ✓

OK

17.1 EPS MODE (OFF GRID)

In the event of a power failure, or when operating in an OFF-Grid mode with the EPS function enabled, the HYD3000-HYD6000-ZP1 inverter will operate in Emergency Power Supply (EPS) mode using the PV power and energy stored in the battery to supply power to critical loads via the LOAD connection port.

17.2 EPS MODE (OFF GRID) - WIRING PROCEDURE AND INSTALLATION TYPES

Identify critical or priority household loads: it is advisable to identify household loads that are vital during power outages, such as lighting, refrigerators or freezers, emergency outlets.




- High power loads (such as ovens, washing machines, heat pumps) may not be supported by the inverter in EPS mode due to the maximum power that can be delivered under these conditions.
- Loads with high inrush currents (such as pumps, compressors or devices driven by electric motors) may not be supported by the inverter in EPS mode because their inrush current, even if only for a very short period, is considerably higher than that supplied by the inverter.
- Inductive loads (such as induction plates) may not be supported by the inverter in EPS mode due to their specific waveform requirements.

Connect the phase, neutral and ground wires to the LOAD output, located on the right side at the bottom of the inverter.

NOTE: the LOAD output must only be used for connecting the critical load.

CHANGE-OVER SWITCH

When performing maintenance on components of the photovoltaic system or when the inverter is unavailable for use, it is recommended to install a change-over switch. This switch allows the loads normally connected to the inverter's load line to be directly powered by the grid.

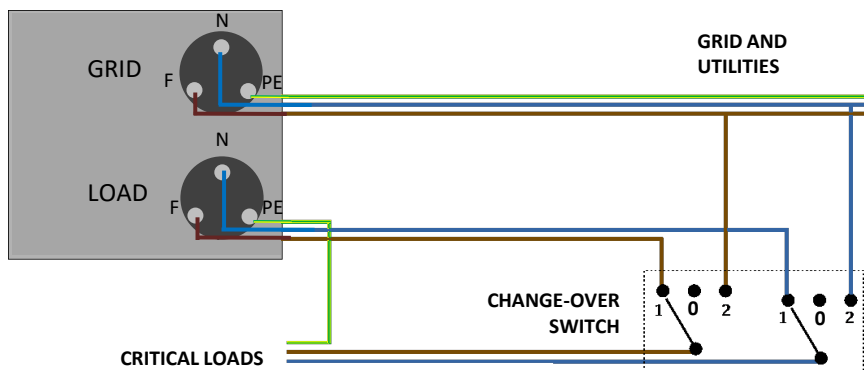


Position 1 → Priority loads connected and powered by the inverter's LOAD line

Position 0 → Priority loads not powered by the inverter or by the grid

Position 2 → Priority loads connected and powered by the grid

DOUBLE SWITCH CONTACTOR

For subsidised systems, a double switch contactor can be installed. This device ensures that critical loads are normally powered by the grid, and they will only switch to the EPS LOAD line of the inverter in case of a power failure, thanks to the switching of the contactors.

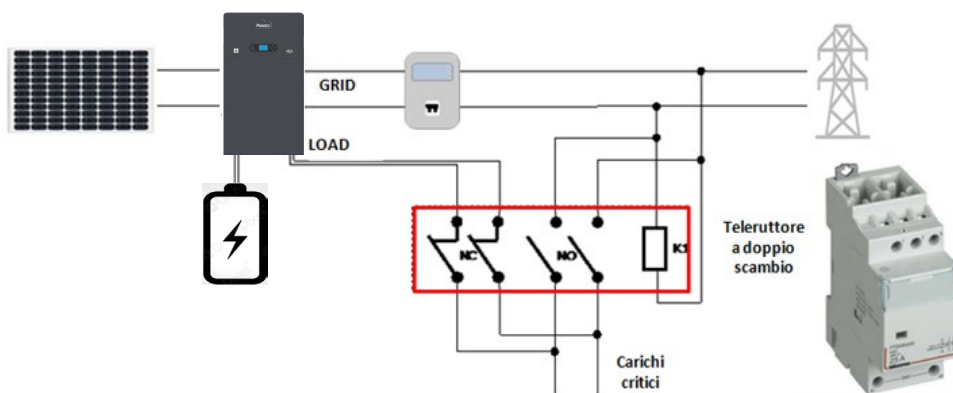


NOTE: In the described conditions, during a power outage, the part of the system powered by the inverter's LOAD port operates in a manner similar to an IT system.

Note: If the hybrid inverter is to be installed under different conditions than those shown in the diagrams above, please contact technical support to check whether this is feasible.


17.3 EPS MODE (OFF GRID) - OPERATION

Under normal operating conditions **with the alternating voltage supplied by the mains**, both the system's standard loads and priority or critical loads are supplied directly by the mains, eliminating the need for a double switch-over contactor. This operation is shown in the figure below.

It should also be noted that the LOAD output remains powered at all times, even when the mains voltage is present.

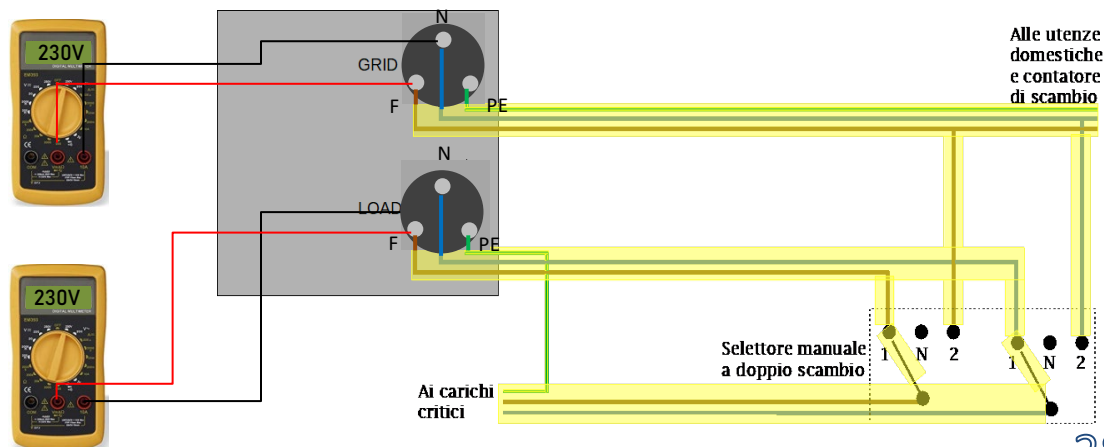

During a **power outage**, the alternating voltage supplied by the grid will be lost. This condition will cause the internal contacts of the hybrid inverter to switch over. Once the preset activation time has elapsed, the inverter will continue to deliver a 230V alternating voltage to the LOAD output, supplying power only to critical loads according to the availability of the batteries and PV system.

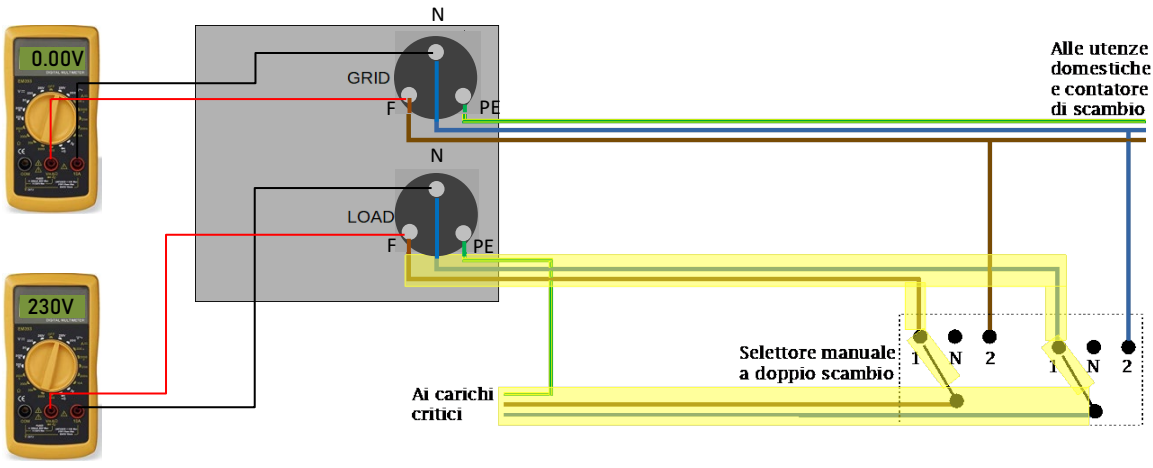


NOTE: with this configuration, the system operates as an IT system during a power outage.


17.4 EPS MODE (OFF GRID) - MENU ENABLING

To enable the EPS (OFF-GRID) mode:

1. The EPS mode must be enabled from the display.

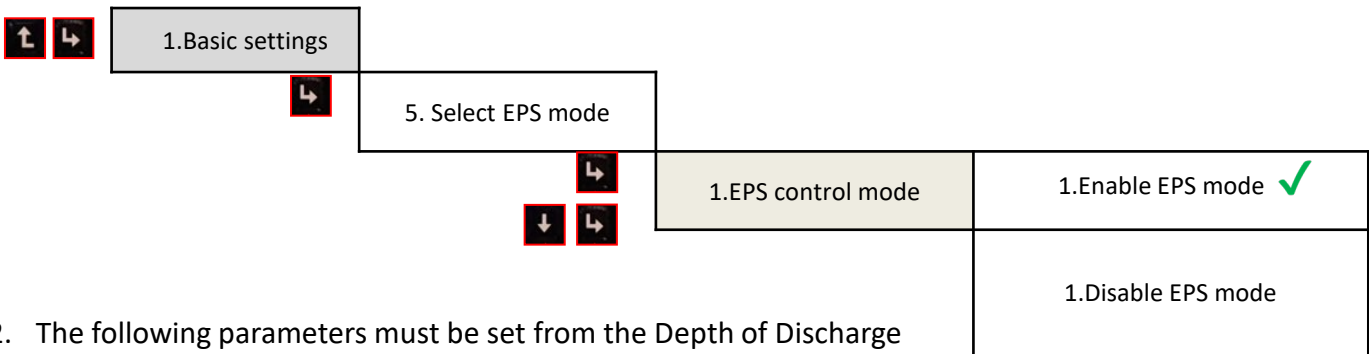


2. The following parameters must be set from the Depth of Discharge menu.

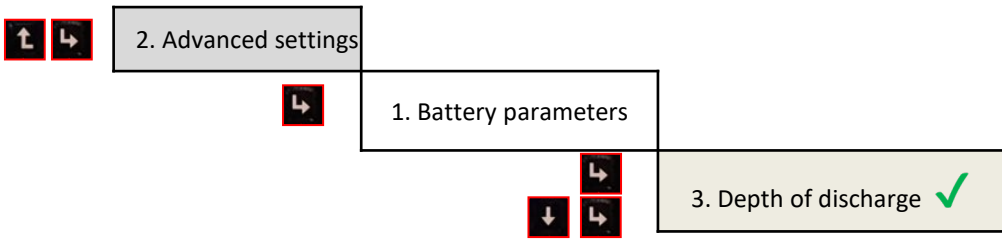

18.1 OFF GRID MODE ONLY

Activating the HYD3000-HYD6000-ZP1 inverter in off-grid mode allows it to supply power to the pre-defined critical loads using energy from the PV system and stored in the batteries. To do this, it is necessary to enable the EPS (Emergency Power Supply) mode.

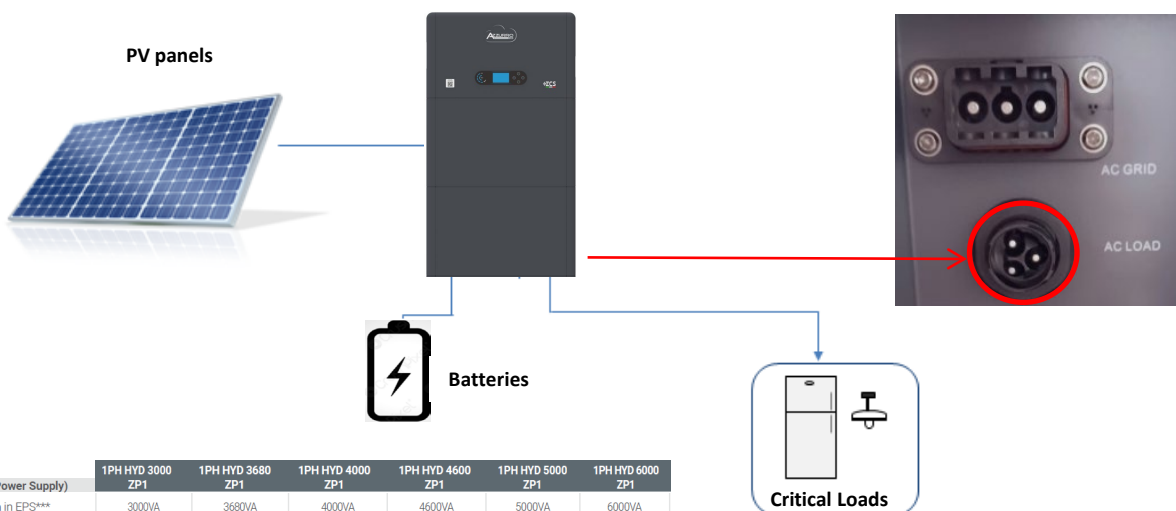


Uscita EPS (Emergency Power Supply)	1PH HYD 3000 ZP1	1PH HYD 3680 ZP1	1PH HYD 4000 ZP1	1PH HYD 4600 ZP1	1PH HYD 5000 ZP1	1PH HYD 6000 ZP1
Massima potenza erogata in EPS***	3000VA	3680VA	4000VA	4600VA	5000VA	6000VA
Tensione e frequenza uscita EPS	Monofase 230V 50Hz/60Hz					
Corrente erogabile in EPS	13A	16A	20A	20.9A	25A	30A
Distorsione armonica totale	< 3%					
Switch time	< 10ms					

*** Power output in EPS mode depends on the type of batteries and the status of the system (e.g. no. of batteries, residual capacity, temperature)

18.2 OFF GRID MODE ONLY - START UP

- 1) Check that the DC circuit breaker of the inverter is in the OFF position.

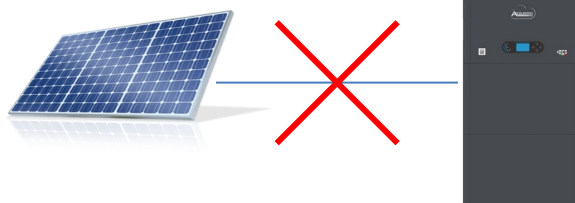


- 2) Switch on the batteries:

- 1) Set the disconnect switch to ON;
- 2) Press the button.


Once pressed, the button will light up and the internal contact will close.



- 3) Switch on the photovoltaic system by turning the switch to the ON position.

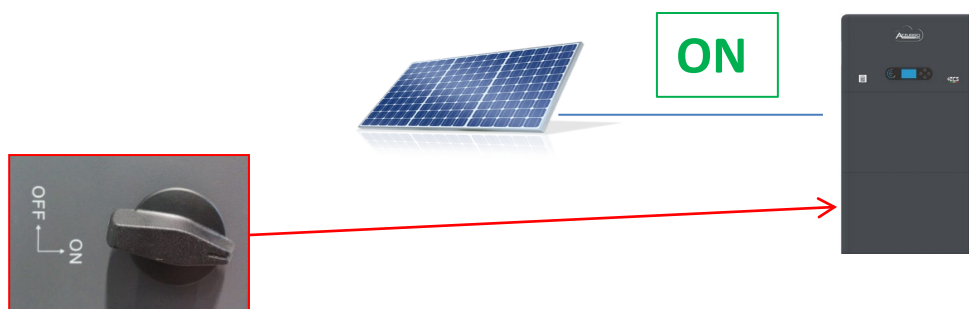

19.1 PARALLEL INVERTER MODE - CONFIGURATION

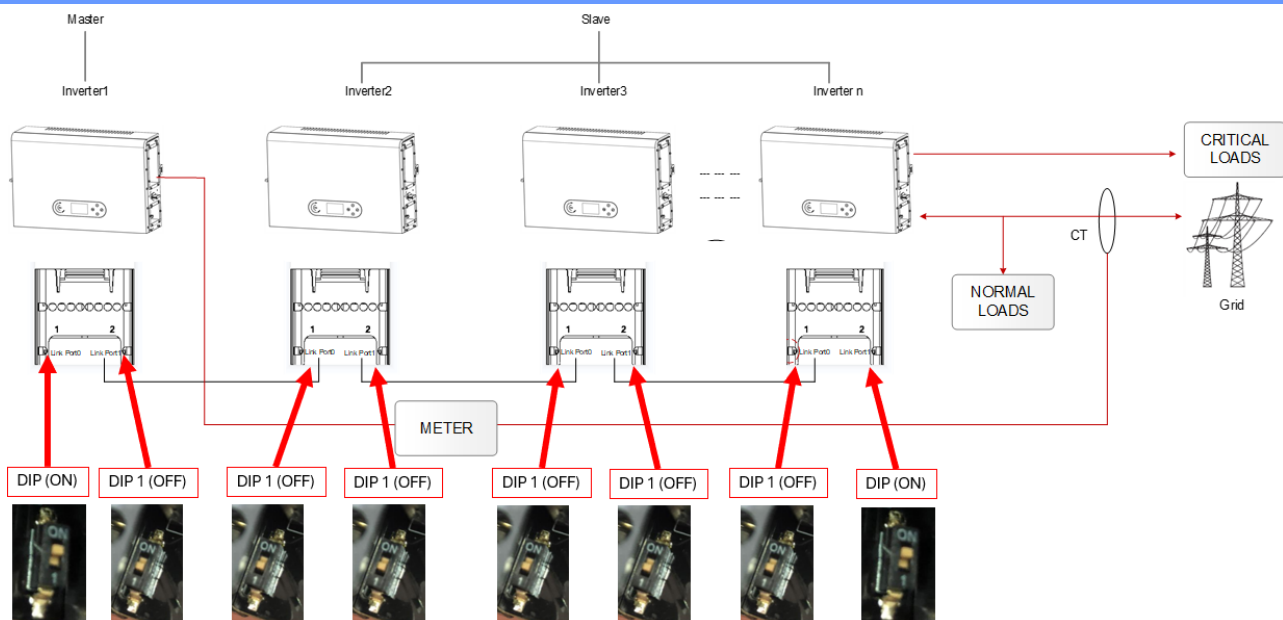

- The inverters must be interconnected using the cable supplied, making sure to populate the inputs as follows:
 - **Link port 0 of Master inverter with terminating resistor enabled (switch set to ON)**
 - **Link port 1 of Master Inverter with terminating resistor disable (switch set to 1) → Link port 0 of Slave 1 Inverter with terminating resistor disable (switch set to 1)**
 - **Link port 1 of Slave 1 Inverter with terminating resistor disable (switch set to 1) → Link port 0 of Slave 2 Inverter with terminating resistor disable (switch set to 1)**
 - ...
 - **Link port 1 of Slave n-1 Inverter with terminating resistor disable (switch set to 1) → Link port 0 of Slave n Inverter with terminating resistor disable (switch set to 1)**
 - **Link port 1 of Slave n inverter with terminating resistor enabled (switch set to ON)**

Note:
 Terminating resistors can be enabled via a switch (ON)
 The parallel cable between inverters is supplied

- If the inverters connected are of the same capacity, the LOAD outputs can be connected in parallel to supply power to the same group of priority loads. This requires the use of a parallel switchboard. It is necessary to ensure that the connections between each inverter and the parallel switchboard have:
 - The same length
 - The same cross-section
 - The lowest possible impedance.
 It is advisable to install appropriate protection for each connection line between the inverter and switchboard.
- The combined load connected to the LOAD outputs should not exceed the total power output of the inverters in EPS mode.
- The meters should be connected to the Master Inverter (Primary).

19.2 PARALLEL INVERTER MODE - SETTINGS

↑ ↓

2. Advanced settings

PWD 0715
 6.Parallel settings

Enable
Primary
00
ok

Enable
Replica
01
ok

Enable
Replica
02
ok

Enable
Replica
03
ok

Master

 Link Port 0 Link Port 1

Slave 1

 Link Port 0 Link Port 1

Slave 2

 Link Port 0 Link Port 1


Slave n

 Link Port 0 Link Port 1

OK

1.Parallel Control	Enable / disable
2.Parallel Master-Slave	Primary / Replica
3.Parallel Address	00 (Primary) 01 (replica 1) ... 0n (Replica n)
4.Save	ok



20. FIRMWARE UPDATE

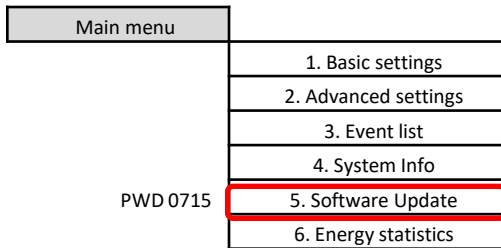

PWD 0715




To update the firmware, upload the unzipped folder called "Firmware" onto the USB flash drive. This folder can be downloaded from the website <https://www.zcsazzurro.com/it/documentazione/easy-power-one-all>
The folder contains the files for the update in .bin or .hex format

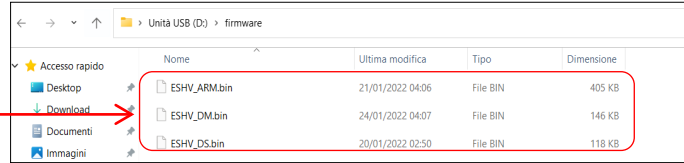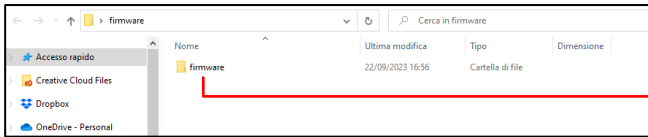


21. SELF-TEST



Before running the self-test make sure the correct country code has been set!!!

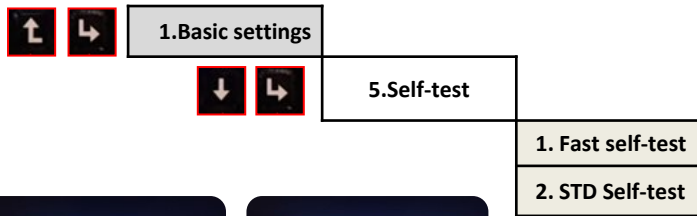

Note: the STD self-test is the same as the Fast self-test except that the waiting times are longer (about 12 minutes for the fast self-test compared to 45 minutes for the STD self-test).

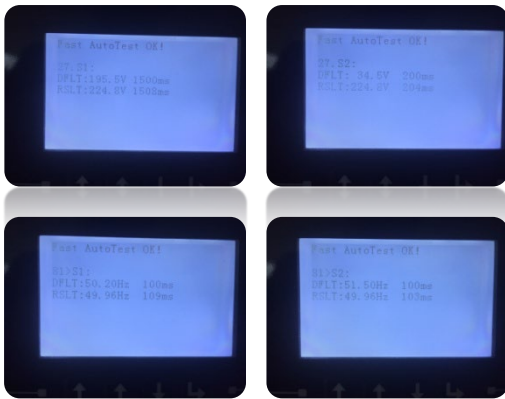

22. % CHARGE MODE

To balance misaligned batteries, it may be necessary to force a charge from the grid to fully charge the batteries

2. Mode % Charge



Rules. 0:	Enable		
From	To	SOC	Charge
02h00m	04h00m	100%	01000 W
Effective date		Maximum charging percentage	
Jan 01 - Dec 31			
Select weekday			
Mon. Mar. Wed. Thu. Fri. Sat. Sun.			

Legend:



Back



Change setting



Next


Select Enabled to activate the charging function

Charge power

Maximum charging percentage


Once the preferred settings have been made, scroll to the initial item and press

23. QUICK INFO ON SYSTEM STATUS

Press  from the main menu to access the instant information on the battery and AC grid.


```
Vgrid:..... 230.2V
Igrid:..... 7.85A
Frequency:..... 50.01Hz
Bat Voltage:..... 48.2V
Bat CurCHRG:..... 0.00A
Bat CurDisC:..... 39.86A
Bat Capacity:..... 52%
Bat Cycles:..... 0000T
Bat Temp:..... 25°C
```

```
PV1 Voltage ..... 517.3V
PV1 Current ..... 0.00A
PV1 Power ..... 0W
PV2 Voltage ..... 7.1V
PV2 Current ..... 0.01A
PV2 Power ..... 0W
Inverter Temp. .... 21°C
```


Press  from the main menu to access the instant information on the DC-side of the inverter.

24. OPERATING STATUSES IN AUTOMATIC MODE

Charge

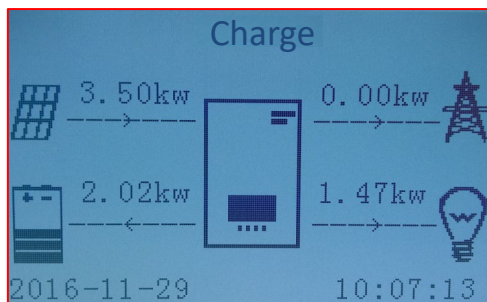


When the power produced by the photovoltaic system is greater than the energy required by the loads, the inverter will charge the battery with the excess energy.

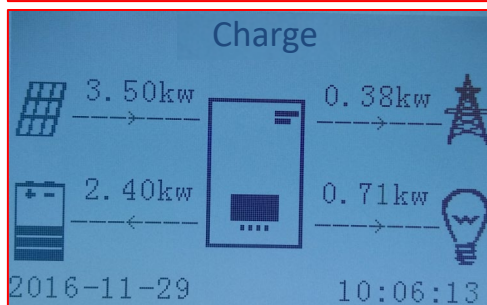


When the battery is fully charged, or when the charging power is limited (to preserve the integrity of the battery), the excess energy will be exported to the grid.

Discharge

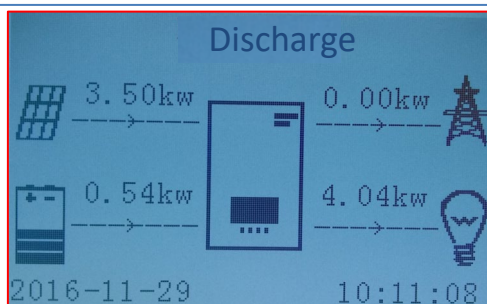


When the power of the photovoltaic system is once again less than the power required by the loads, the system will use the energy stored in the battery to power the household loads.

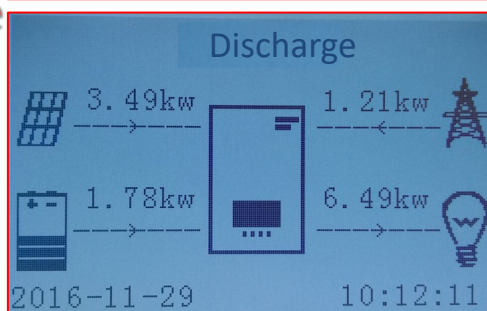

When the total power produced by the photovoltaic system and supplied by the battery is less than that required by the loads, the missing energy will be taken from the grid.

Standby

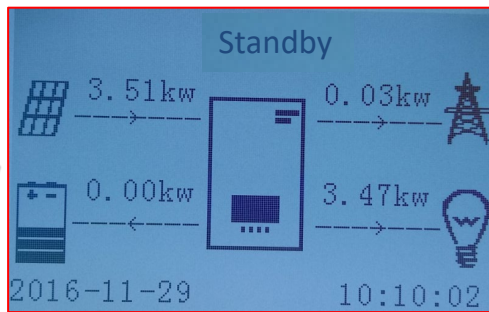

The inverter will remain in Standby mode until:

- the difference between the photovoltaic production and the power required by the loads is less than 100W
- the battery reaches full charge status, and the photovoltaic production exceeds consumption by at least 100W)
- the battery is flat and the photovoltaic production is lower than consumption (by no more than 100W)